

Component Procedures: Front Crankshaft Seal

Table of Contents

1. Parts and Labor (itype_189)
2. Front Oil Seal Replacement (Article 1370208)

Component Procedures: Front Crankshaft Seal

Parts and Labor (itype_189)



Parts

Qualifier	Part #	Name	Price	Note
Front Cover Seal	L3G610602	19 - Front Cover Seal	11.57	

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Front Crank Seal, R&R	B	2.0	1.5

Front Oil Seal Replacement (Article 1370208)

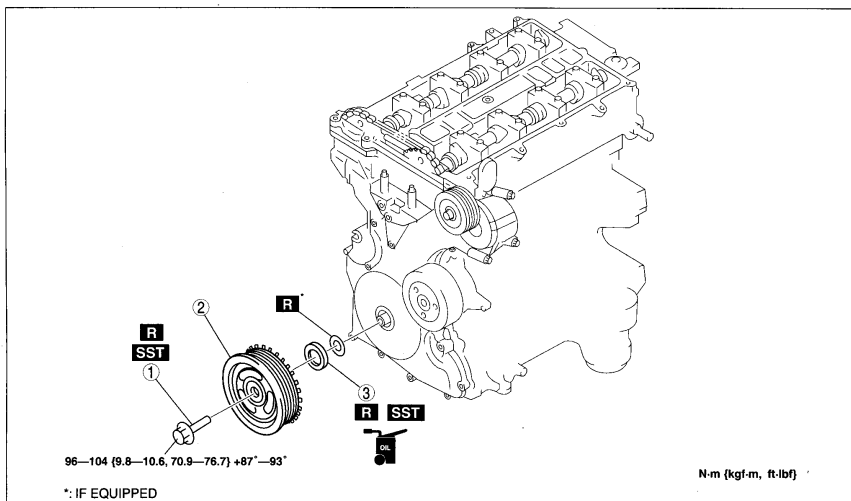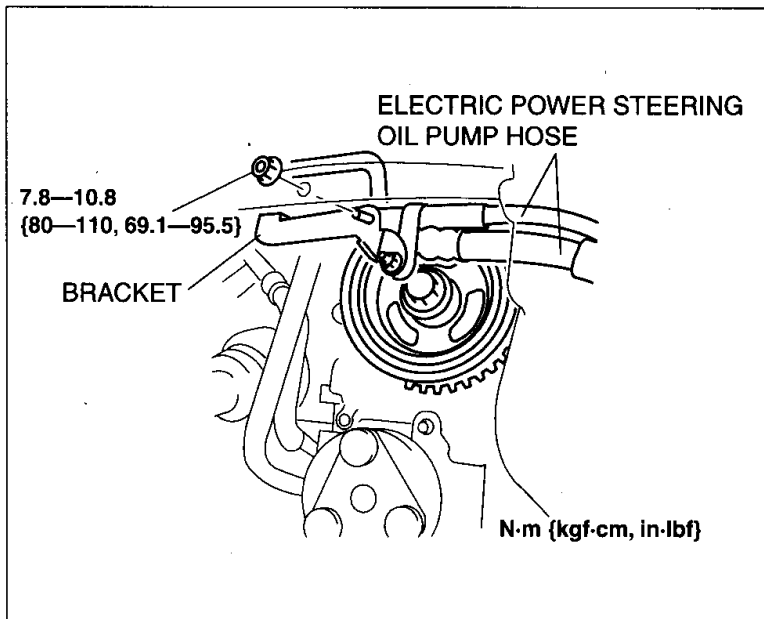


1	Crankshaft pulley lock bolt (See Crankshaft Pulley Lock Bolt Removal Note.) (See Crankshaft Pulley Lock Bolt Installation Note.)
---	--


2	Crankshaft pulley
3	Front oil seal (See Front Oil Seal Removal Note.) (See Front Oil Seal Installation Note.)

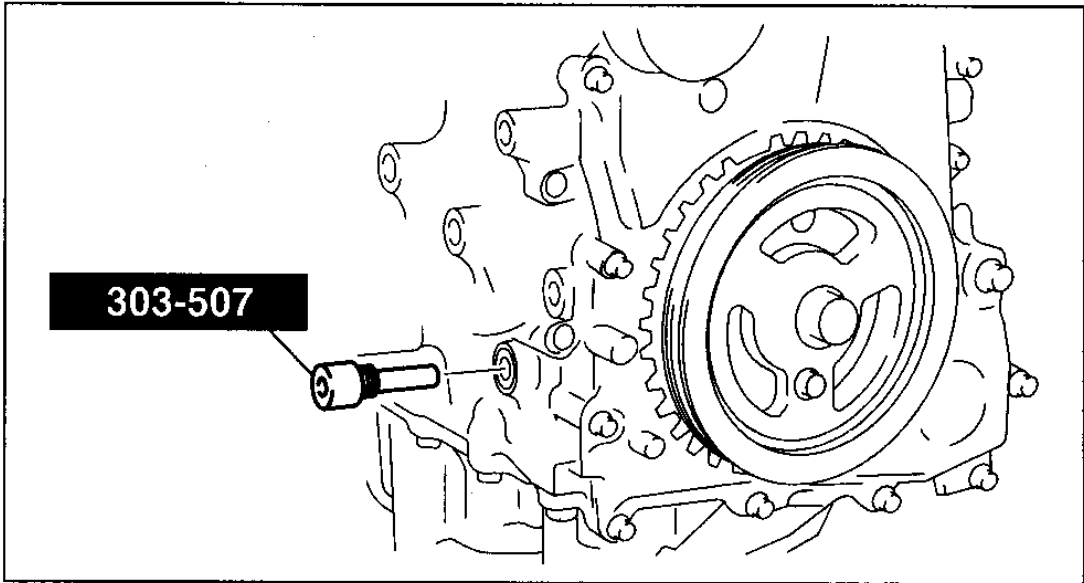


am3uuw0000121

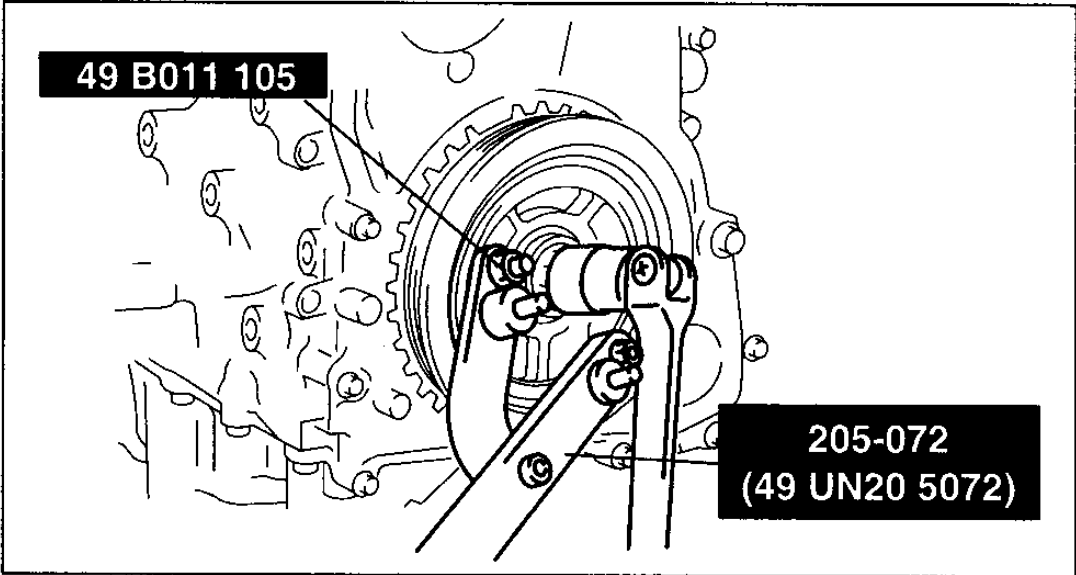


am3uuw0000121

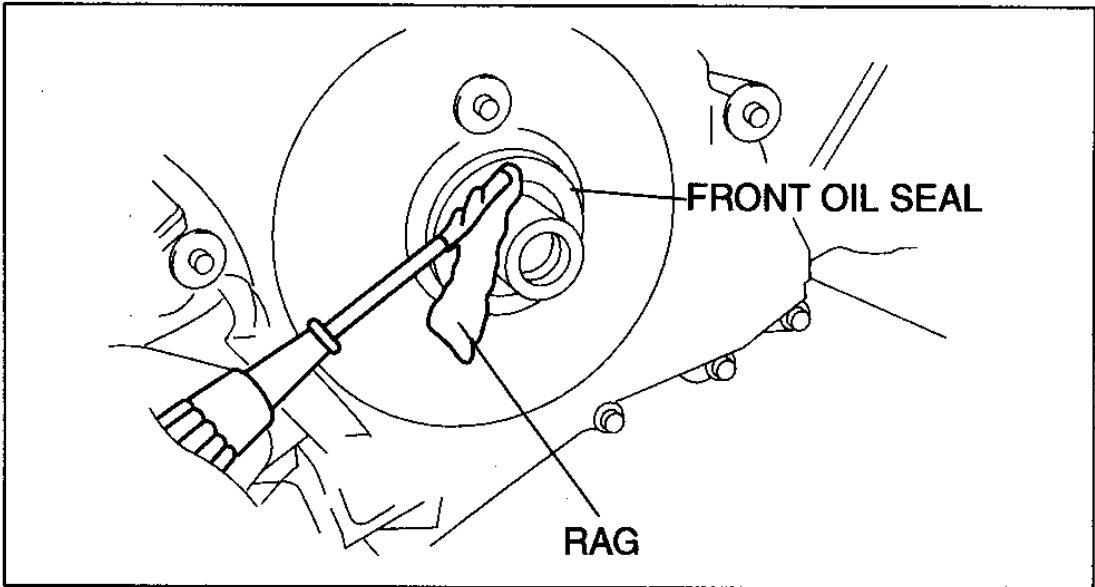


am3uuw0000121

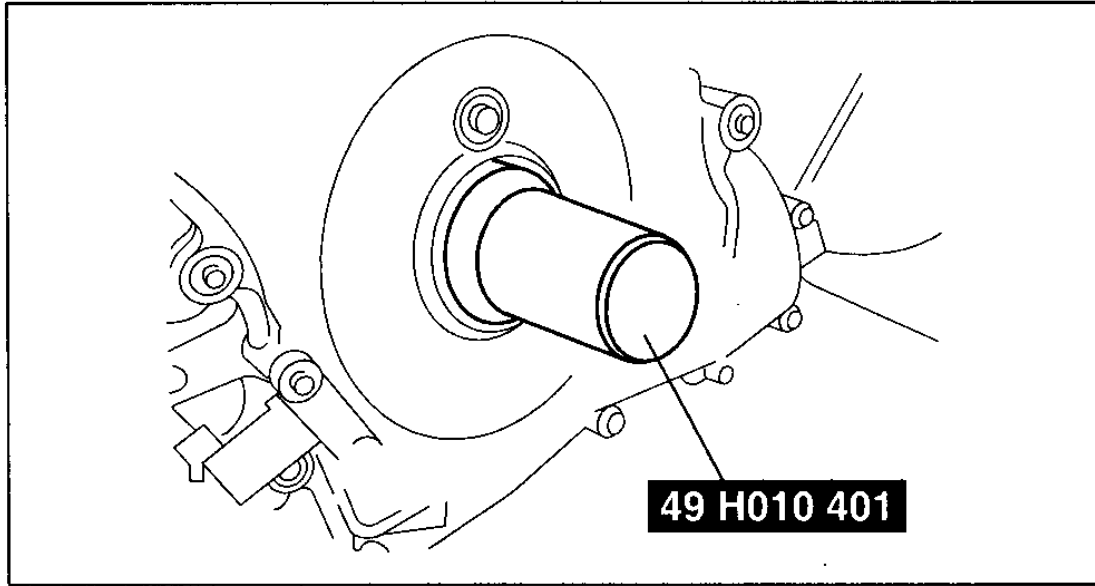


am3uuw0000121

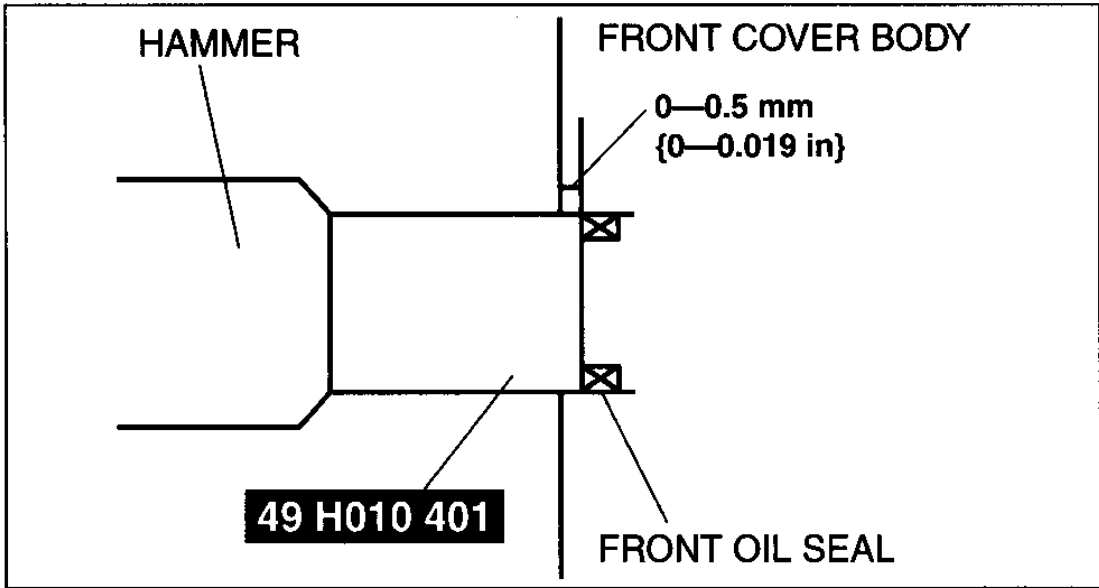


am3uuw0000121

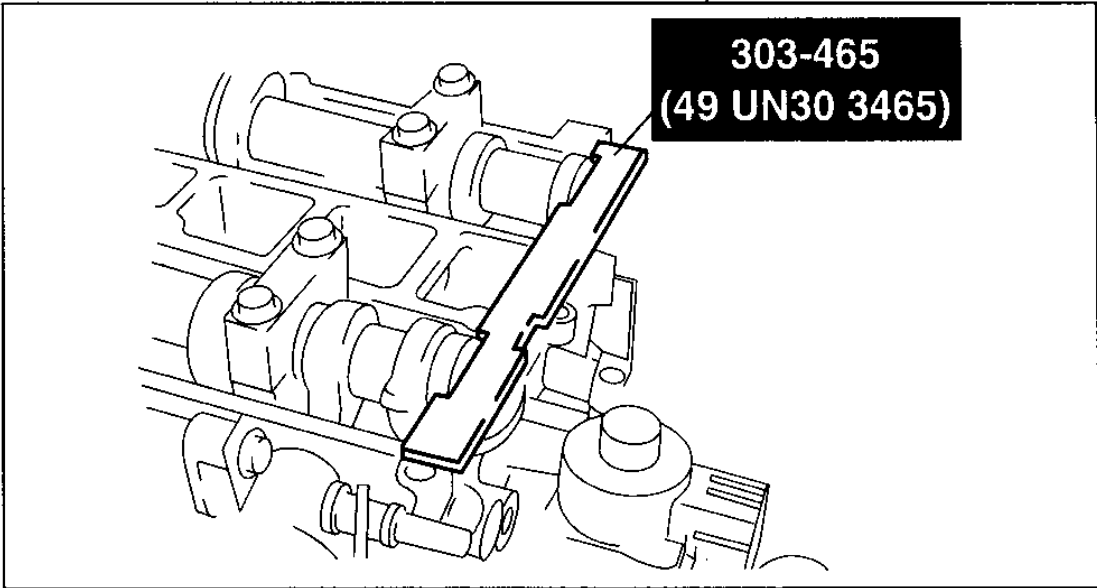


am3uuw0000121

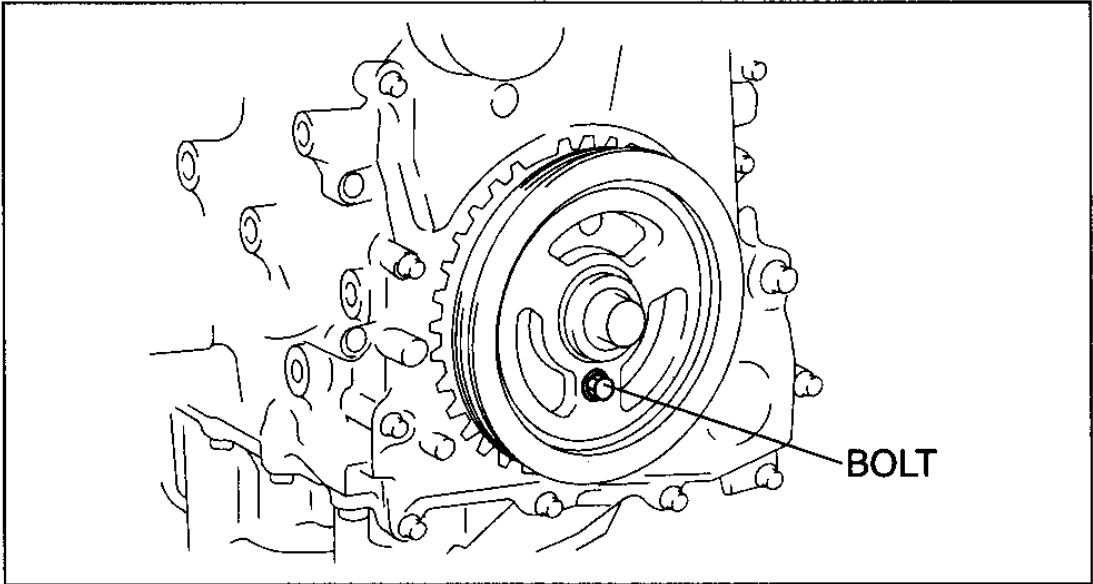

am3uuw0000122

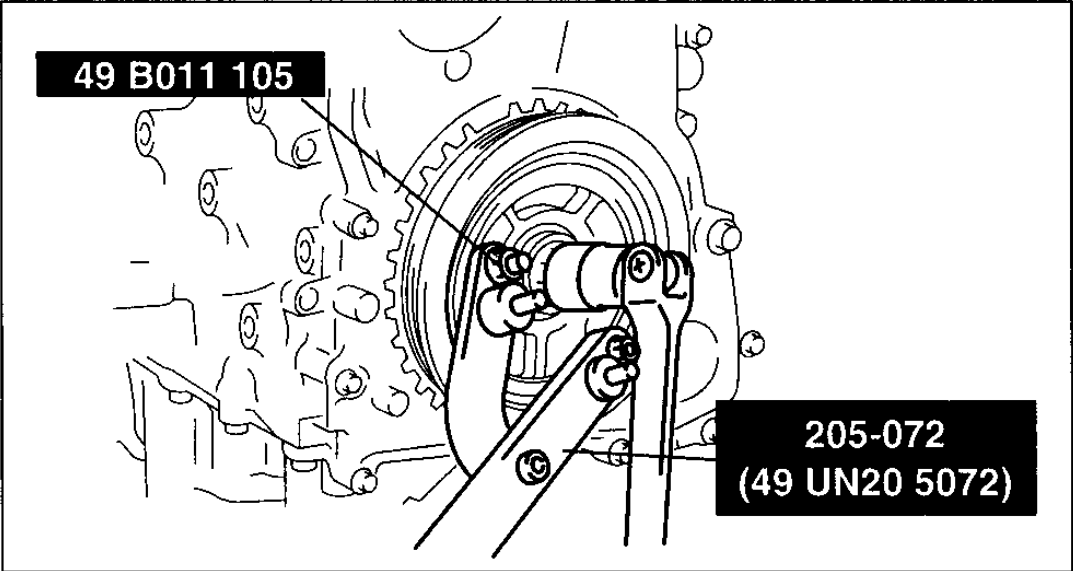

am3uuw0000121

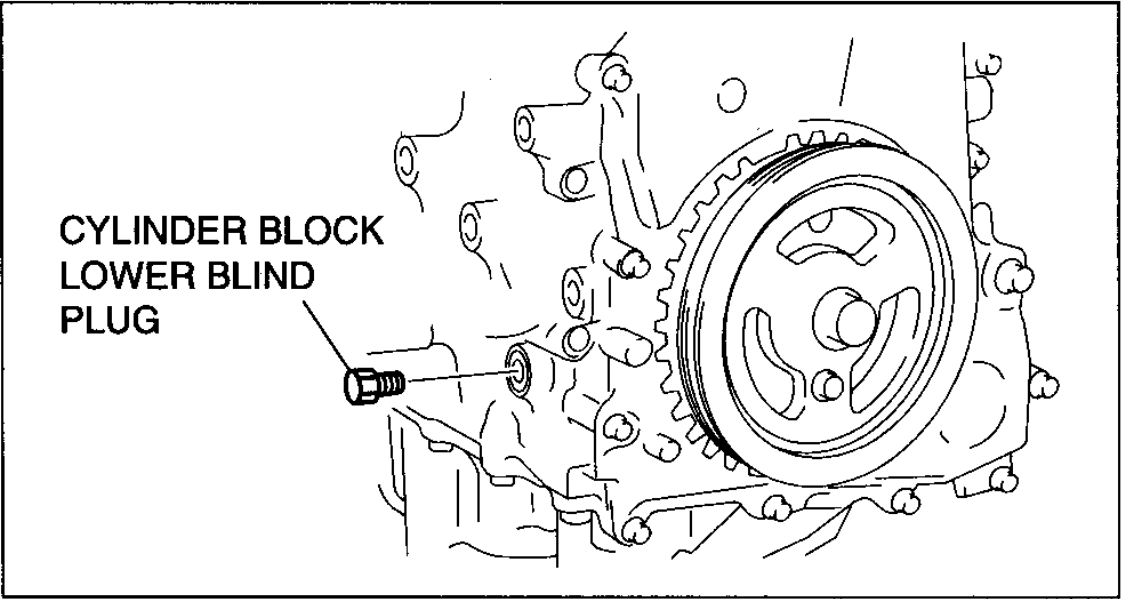

CYLINDER BLOCK
LOWER BLIND
PLUG

am3uuw0000122