

Component Procedures: Brake Fluid Level Sensor/Switch

Table of Contents


1. Conventional Brake System Location Index (Article 1409337)
2. Dynamic Stability Control (Article 1409338)
3. Brake Fluid Level Sensor Inspection (Article 1361975)

Component Procedures: Brake Fluid Level Sensor/Switch

Conventional Brake System Location Index (Article 1409337)

CONVENTIONAL BRAKE SYSTEM LOCATION INDEX

454110300100

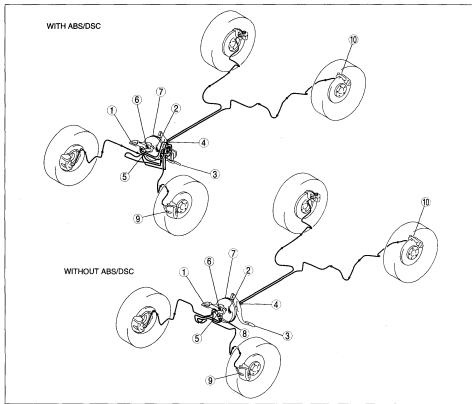

03/01/14/01

1	Brake fluid (See AIR BLEEDING.)	7	Power brake unit (See POWER BRAKE UNIT INSPECTION.)
2	Vacuum line (See VACUUM LINE INSPECTION.)	8	Proportioning valve (See PROPORTIONING VALVE INSPECTION.)
3	Brake pedal (See BRAKE PEDAL INSPECTION.)	9	Front brake (disc) (See FRONT BRAKE (DISC) INSPECTION.)
4	Brake switch (See BRAKE SWITCH INSPECTION.)		
5	Master cylinder		
6	Brake fluid level sensor (See BRAKE FLUID LEVEL SENSOR INSPECTION.)		


10	Rear brake (disc) (See REAR BRAKE (DISC) INSPECTION.)
----	--

Dynamic Stability Control (Article 1409338)

Non Standards

- DSC Location Index (1409339)

Brake Fluid Level Sensor Inspection (Article 1361975)

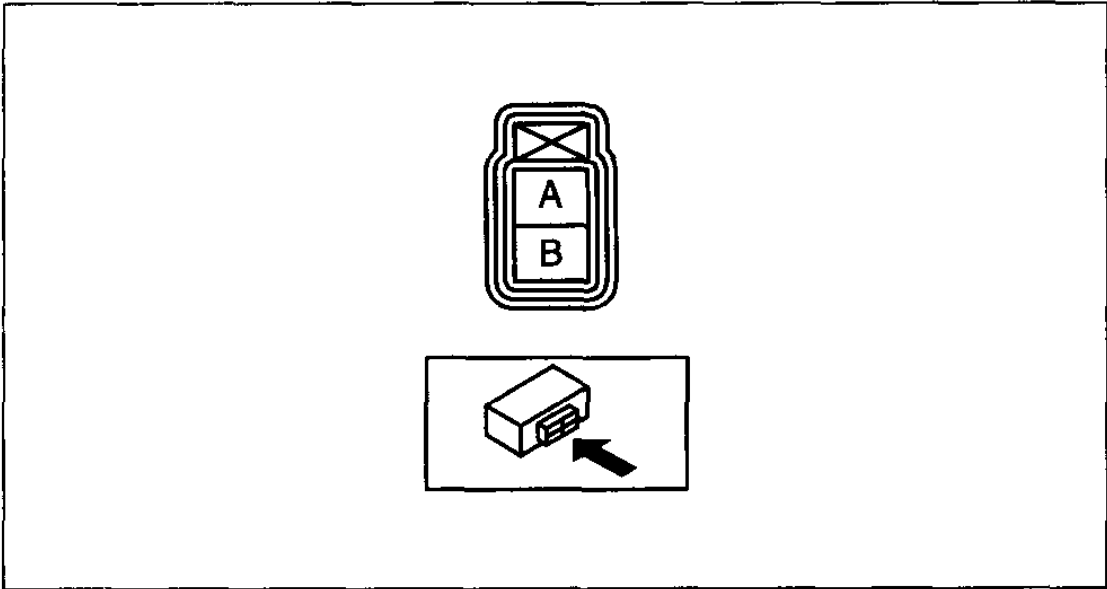

B3E0411W039

○—○: Continuity

Condition	Terminal	
	A	B
Above MIN	○—○	○—○
Below MIN		

am3zzw00002610