

Component Procedures: Hood Latch Release Cable

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Hood Latch Release Cable

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Release Cable	BP4K56720C	Release Cable	62.29	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Release Cable, R&R	B	0.8	0.5