

Component Procedures: Power Door Lock Actuator

Table of Contents

1. Parts and Labor (itype_189)
2. Latch and Lock Actuator Removal/Installation (Article 1440044)
3. Lock Actuator Inspection (Article 1440213)
4. Door Latch and Lock Actuator Inspection (Article 1440223)

Component Procedures: Power Door Lock Actuator

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Front Door > One Side	B	0.7	0.0
Replace	Rear Door > One Side	B	0.5	0.0

Latch and Lock Actuator Removal/Installation (Article 1440044)

Non Standards

- Front Door (1440045)
- Rear Door (1440046)
- Liftgate (1440047)

Lock Actuator Inspection (Article 1440213)

Non Standards

- Front Door (1440214)
- Rear Door (1440217)
- Liftgate (1440220)

Door Latch and Lock Actuator Inspection (Article 1440223)

Non Standards

- Front (1440224)
- Rear (1440225)