


# **Component Procedures: Engine Oil Control Valve**

## **Table of Contents**

1. Oil Control Valve (OCV) Removal/Installation (Article 1411768)
2. Oil Control Valve (OVC) Removal/Installation (Article 1450218)
3. Oil Control Valve (OCV) Inspection (Article 1413107)


## Component Procedures: Engine Oil Control Valve

### Oil Control Valve (OCV) Removal/Installation (Article 1411768)

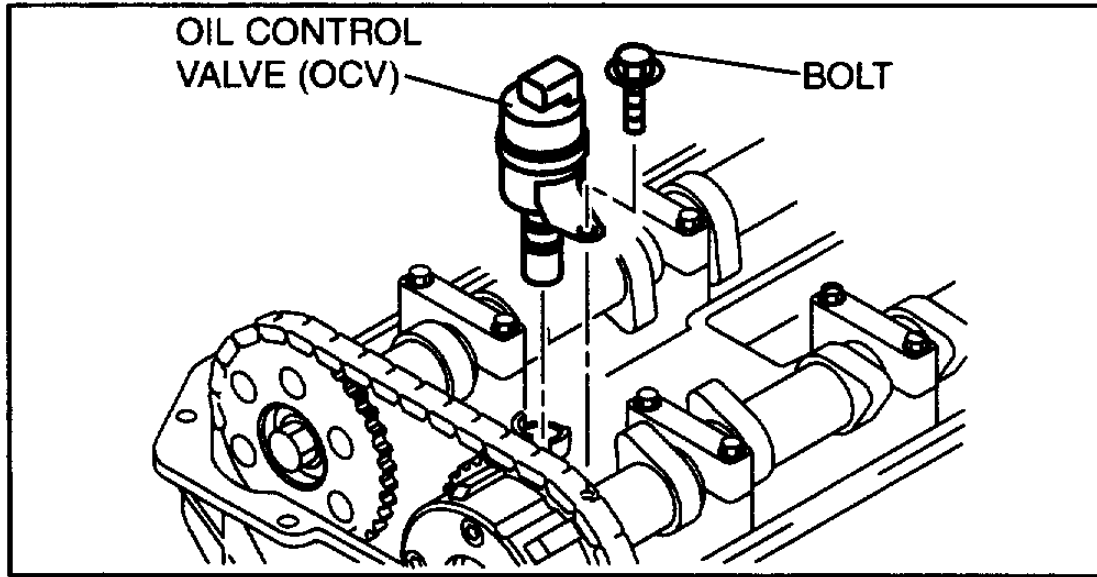


C3U0110W052

### Oil Control Valve (OVC) Removal/Installation (Article 1450218)

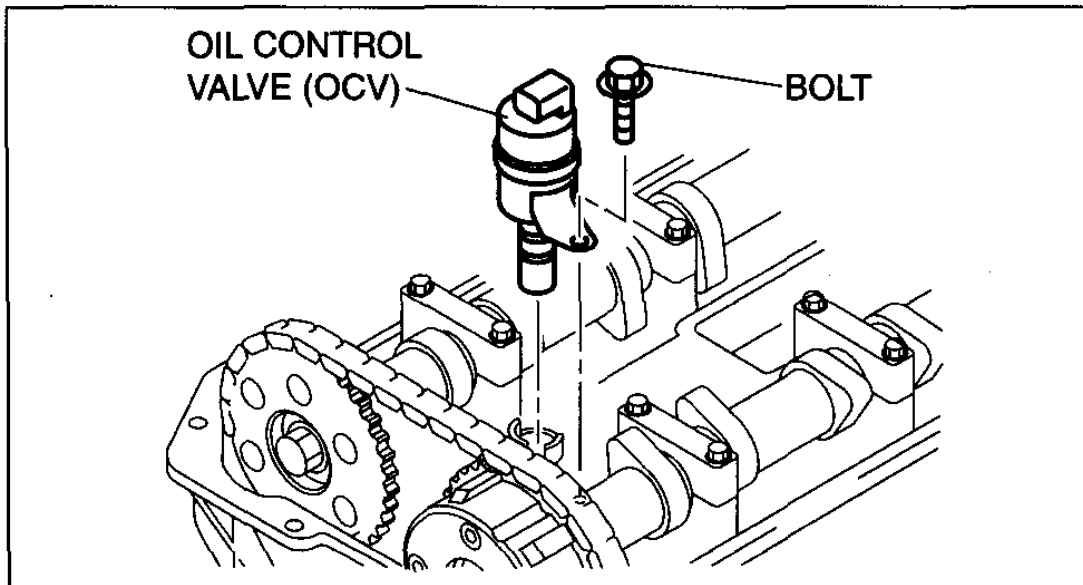


am3uuw0000142


### Oil Control Valve (OCV) Inspection (Article 1413107)

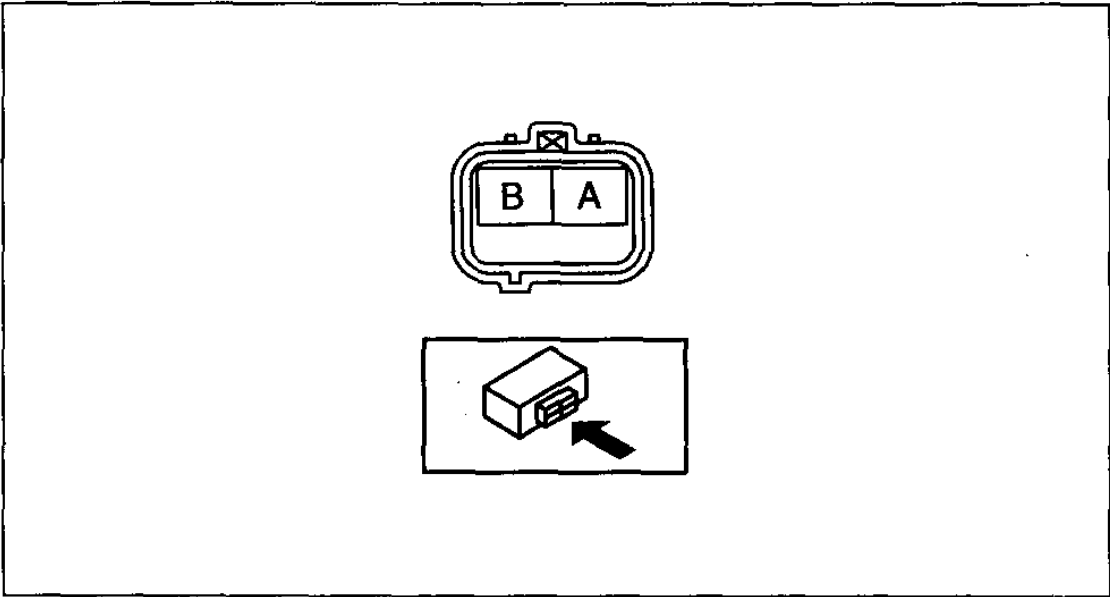


b3e0110w151

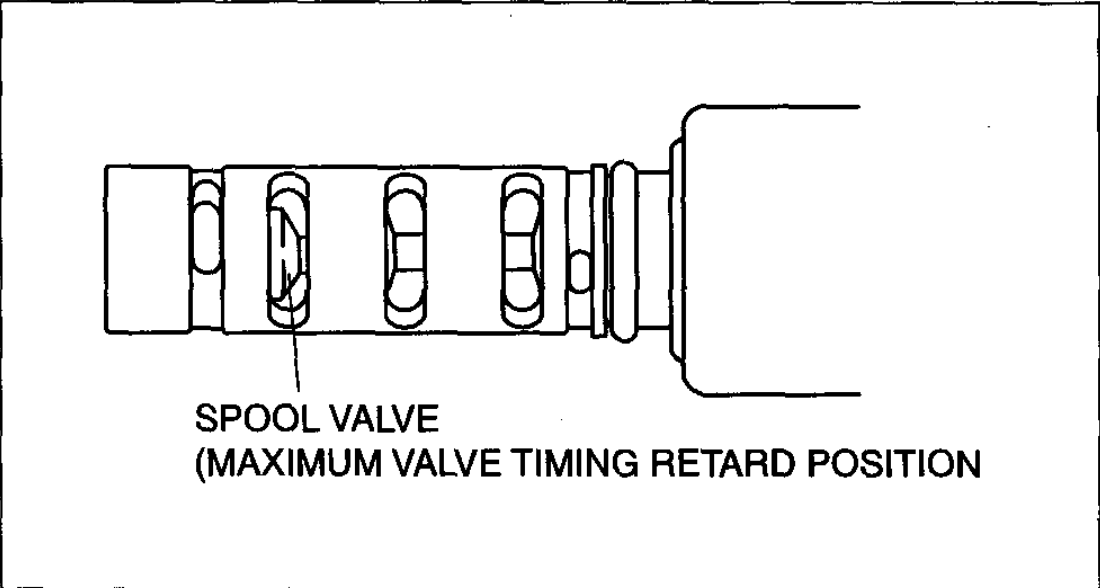

b3e0110e090

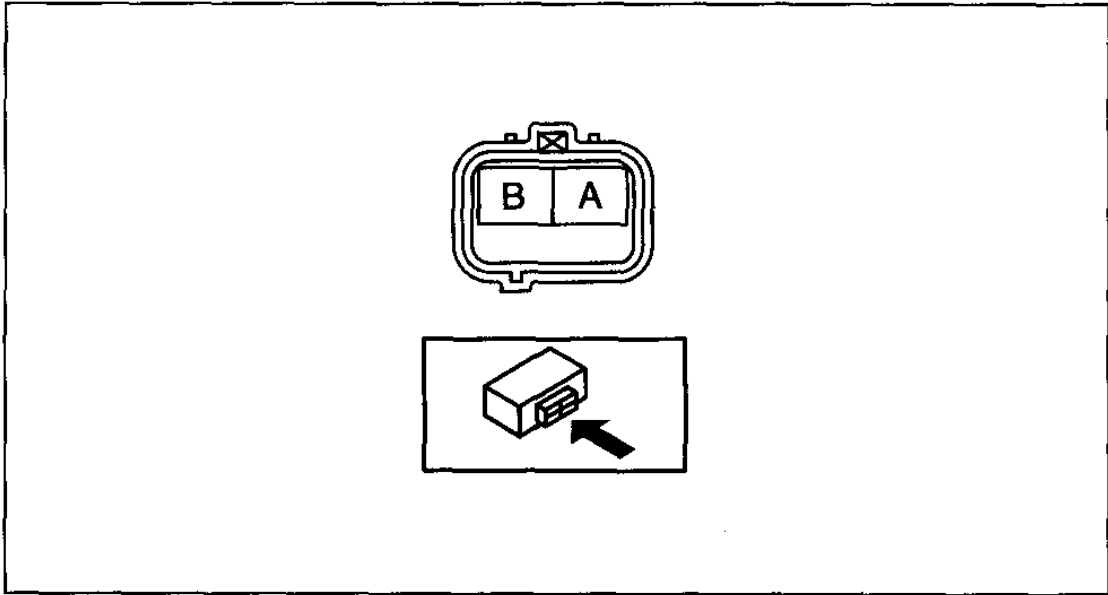

b3e0110w151

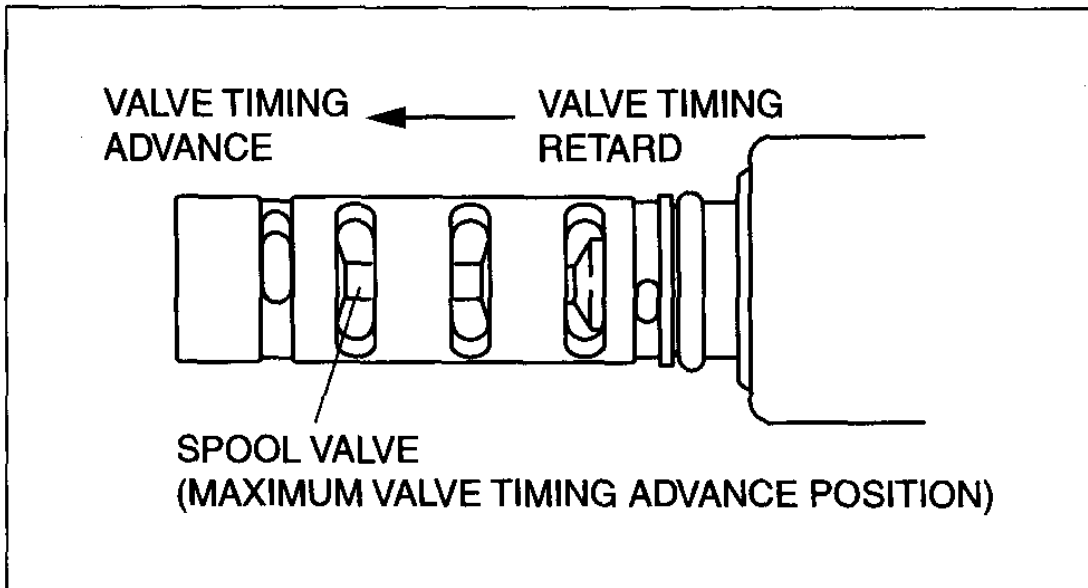

b3e0110e091