


# **Component Procedures: Hood Latch Release**

## **Table of Contents**

1. Removal and Replacement (itype\_401)


# Component Procedures: Hood Latch Release

## Removal and Replacement (itype\_401)

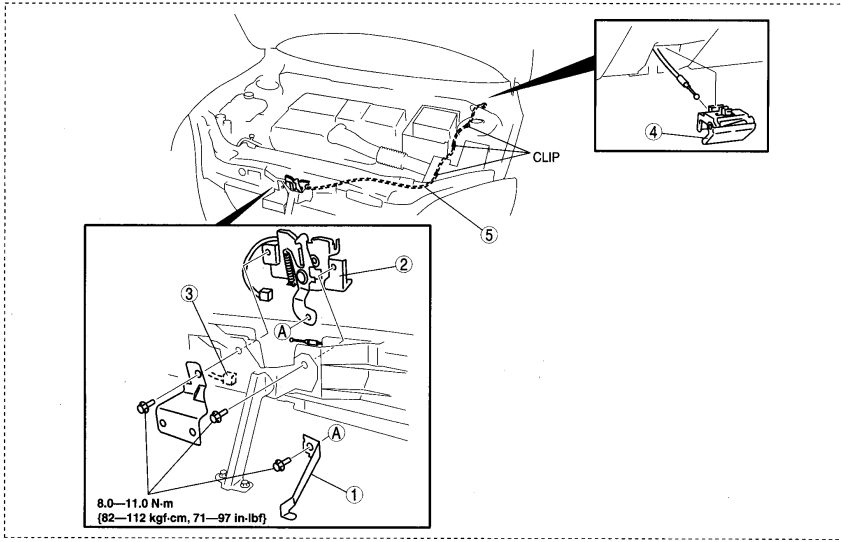

1	Lever (5 door)
2	Hood latch
3	Hood latch switch connector

4	Hood release lever
5	Hood release cable

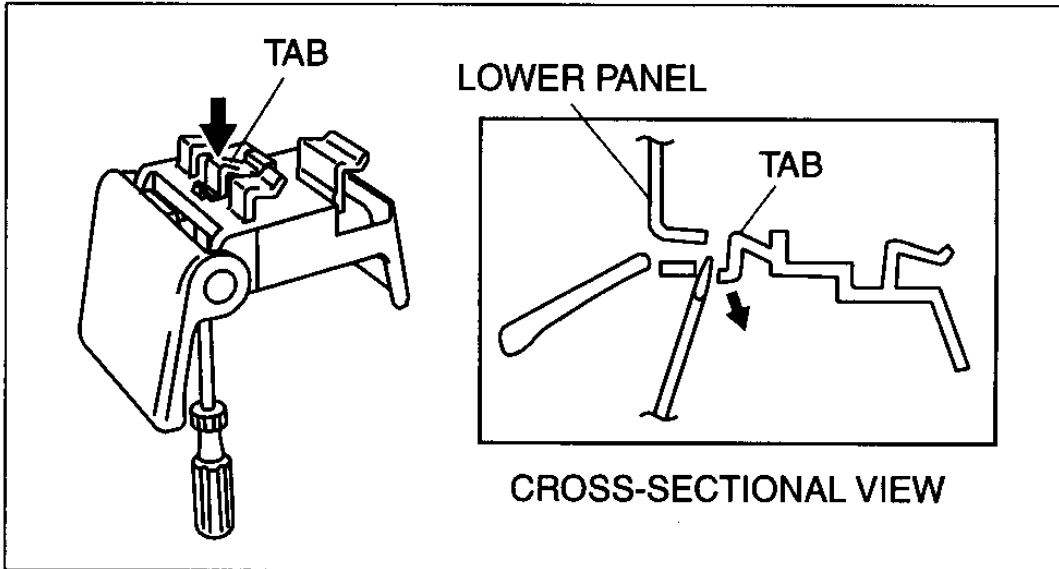

am3uuw000083