

# **Component Procedures: Sunroof / Moonroof Switch**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Components (itype\_32)
3. Removal and Replacement (itype\_401)
4. Component Tests and General Diagnostics (itype\_383)

# Component Procedures: Sunroof / Moonroof Switch

## Parts and Labor (itype\_189)


### Parts

Qualifier	Part #	Name	Price	Note
Switch > Beige	GJ6R69970A30	Switch	66.93	Includes Overhead Console ?
Switch > Gray	GJ6R69970A77	Switch	68.75	Includes Overhead Console ?

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Switch, R&R	B	0.3	0.2

## Components (itype\_32)

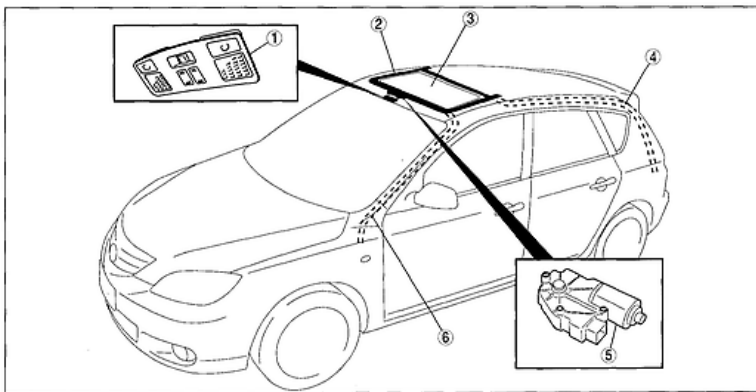

1	Sunroof switch
2	Sunroof unit
3	Glass panel

4	Rear drain hose
5	Sunroof motor
6	Front drain hose

## Removal and Replacement (itype\_401)

### SUNROOF SWITCH REMOVAL/INSTALLATION

#### NOTE:

The sunroof switch and the map light are a single unit.

1. Disconnect the negative battery cable.
2. Remove the map light from the headliner


3. Install in the reverse order of removal.

## Component Tests and General Diagnostics (itype\_383)

○—○ : Continuity

Switch position	Terminal				
	A	D	F	H	G
Slide open		○	—	—	○
Slide close			○	—	○
Tilt up				○	○
Tilt down	○	—	—	—	○
OFF					

B3E0915W112

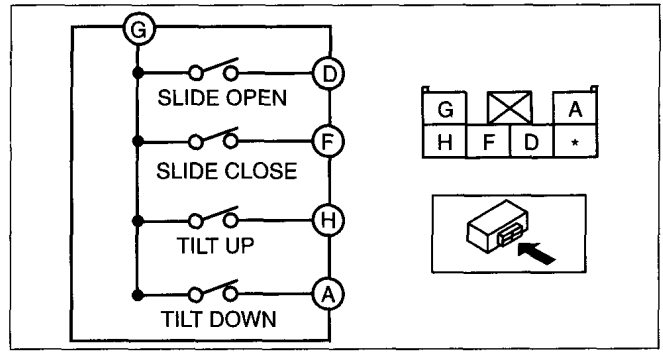

B3E0915W111