


Component Procedures: Hood Switch / Sensor

Table of Contents

1. Removal and Replacement (itype_401)

Component Procedures: Hood Switch / Sensor

Removal and Replacement (itype_401)

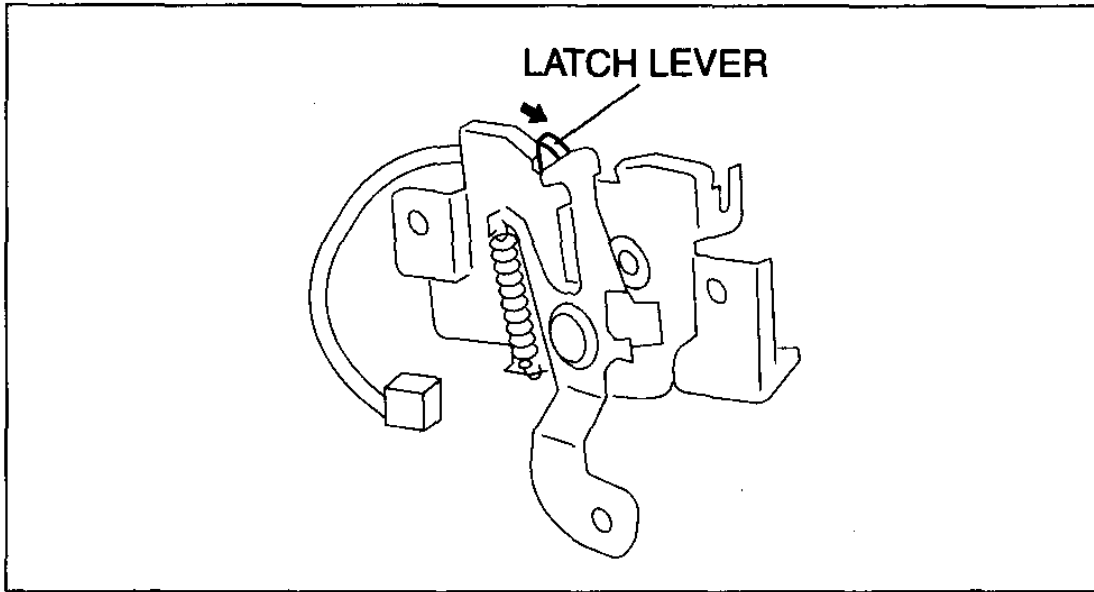


C3U0914W015

○—○ : Continuity

Latch condition	Terminal	
	A	B
Latch (hood is closed)		
Unlatch (hood is open)	○—○	○—○

C3U0914W123

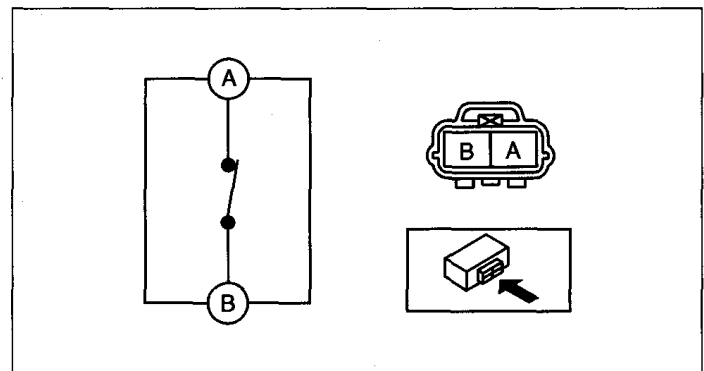

C3U0914W114