

# **Component Procedures: Flex Plate**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. [FN4A-EI] Automatic Transmission/Transaxle (Article 1391302)
3. [FS5A-EI] Automatic Transmission/Transaxle (Article 1391304)
4. Mechanical (including Torque) (itype\_28)

# Component Procedures: Flex Plate

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
4 Speed	FNK119020A	Flexplate	196.82	
5 Speed	FNE219020B	Flexplate	173.18	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Flywheel, R&R	B	5.8	0.0

## [FN4A-EI] Automatic Transmission/Transaxle (Article 1391302)

Non Standards


- Drive Plate Removal/Installation (1391303)

## [FS5A-EI] Automatic Transmission/Transaxle (Article 1391304)

Non Standards

- Drive Plate Removal/Installation (1391305)

## Mechanical (including Torque) (itype\_28)

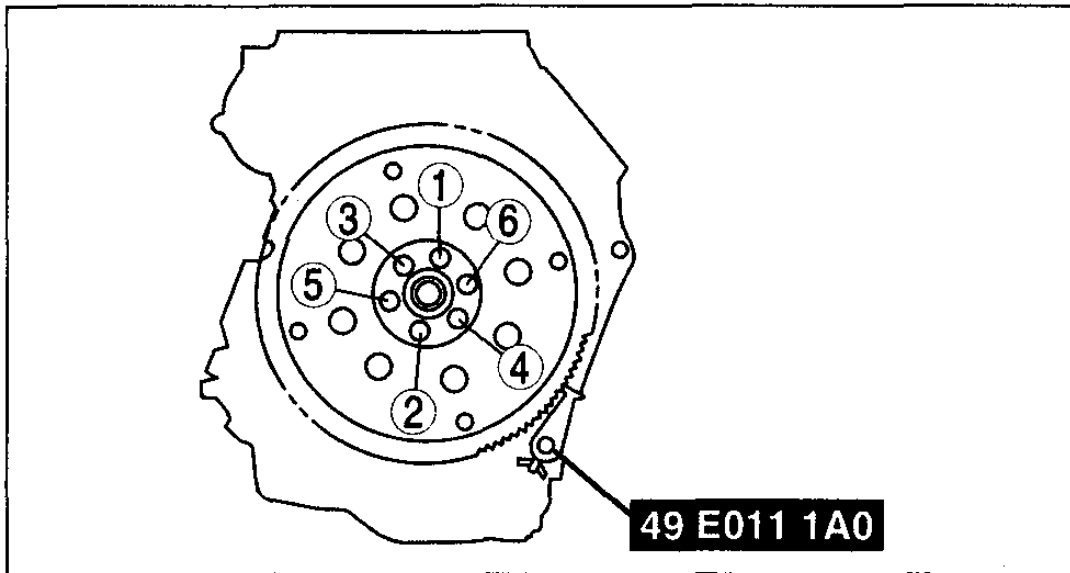

c3u0517w047