

Component Procedures: Coolant Reservoir

Table of Contents

1. Parts and Labor (itype_189)
2. Coolant Reserve Tank Removal/Installation (Article 1362177)

Component Procedures: Coolant Reservoir

Parts and Labor (itype_189)


Parts

Qualifier	Part #	Name	Price	Note
Reservoir	LF8B15360A	6 - Reservoir	43.29	
Reservoir Cap	LF5015205A	7 - Reservoir Cap	42.53	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Expansion Tank, R&R	C	0.7	0.5

Coolant Reserve Tank Removal/Installation (Article 1362177)

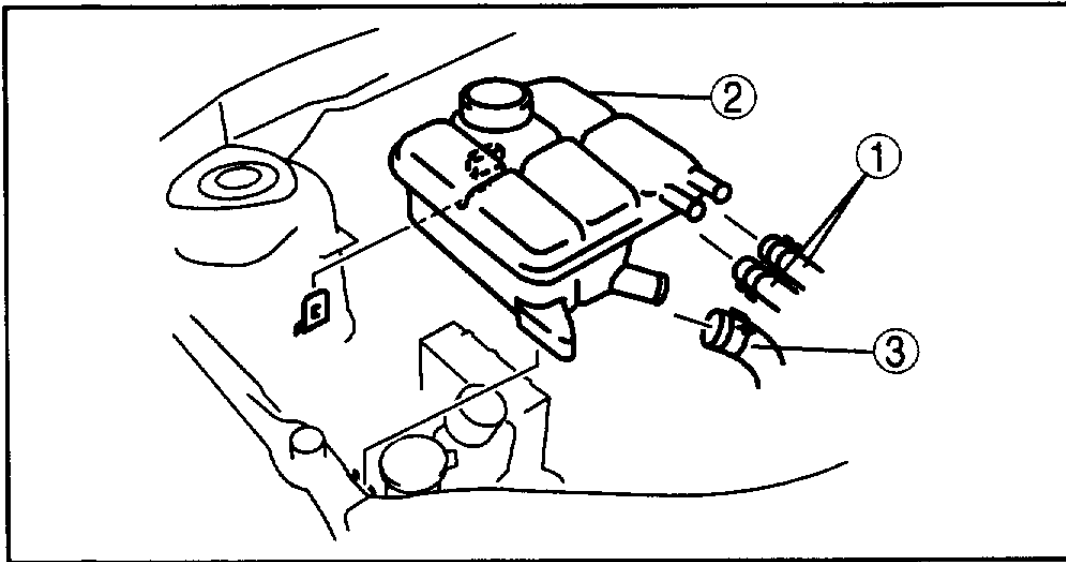

B3E0112W132

1	Hose
2	Coolant reserve tank
3	Hose