

# Component Procedures: Headlamp Control Module

## Table of Contents

1. Parts and Labor (itype\_189)
2. Components (itype\_32)
3. Removal and Replacement (itype\_401)

# Component Procedures: Headlamp Control Module

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
HID Headlamps	D530510H3	Control Unit	803.17	


### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	One Side	B	1.2	0.0
Replace	Both Sides	B	1.8	0.0

## Components (itype\_32)

LIGHTING SYSTEMS LOCATION INDEX


40918000100

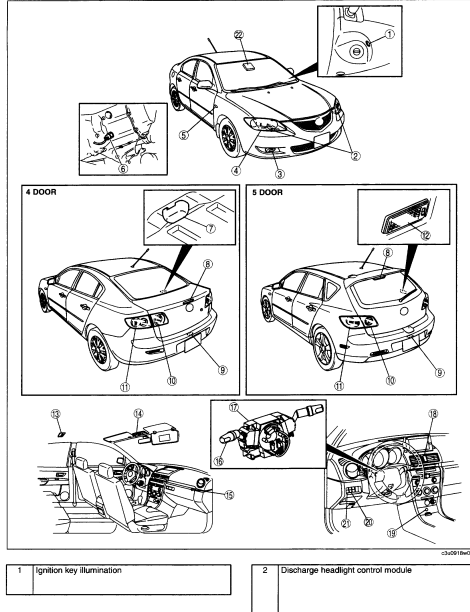

3	Front fog light
4	Front combination light
5	Front side turn light
6	Back-up light switch (MTX)
7	Trunk compartment light
8	High-mount brake light
9	License plate light
10	Inboard light
11	Rear combination light

12	Cargo compartment light
13	Interior light
14	Map light
15	Glove compartment light
16	Light switch
17	Combination switch
18	Hazard warning switch
19	Ashtray illumination
20	Panel light control switch
21	Headlight leveling switch
22	Light sensor

# Removal and Replacement (itype\_401)

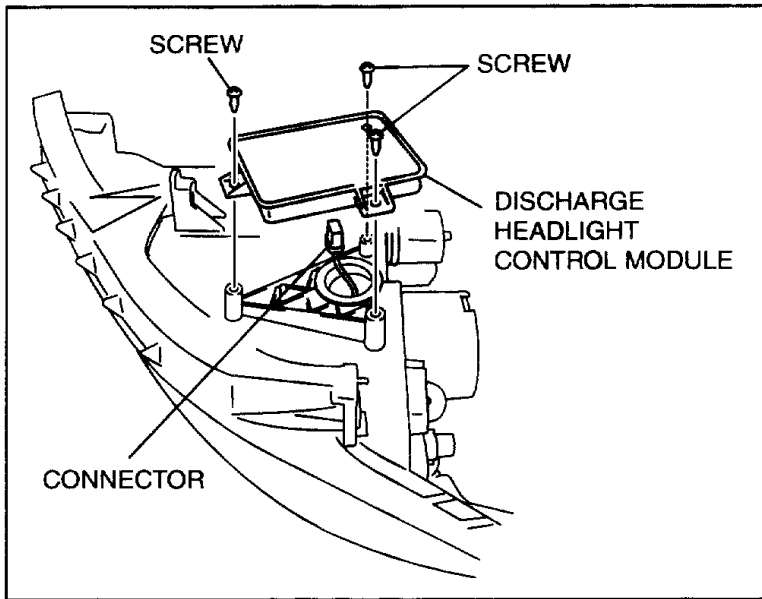

b3e0918w108