

Component Procedures: Air Cleaner Fresh Air Duct/Hose

Table of Contents

1. Front Intake Air Duct Replacement (Article 11422)
2. Air Cleaner Outlet Duct Replacement (Article 11398)

Component Procedures: Air Cleaner Fresh Air Duct/Hose

Front Intake Air Duct Replacement (Article 11422)

Callout Component Name

Preliminary Procedure Remove the air cleaner assembly . Refer to Air Cleaner Assembly Replacement

Preliminary Procedure

1 Front Intake Air Duct

Air Cleaner Outlet Duct Replacement (Article 11398)

Removal Procedure

- Ignition OFF.
- Detach the positive crankcase ventilation (PCV) hose from the air cleaner outlet duct . Click for full-size image
- Remove the air cleaner outlet duct retaining clamps (1).
- Remove the air cleaner outlet duct from the vehicle.

Installation Procedure

- Install the air cleaner outlet duct to the vehicle. Click for full-size image
- Position the air cleaner outlet duct clamps (1) and tighten to 2 Nm (18 lb in) .
- Install the positive crankcase ventilation (PCV) hose to the air cleaner outlet duct.