

Component Procedures: Transmission Speed Sensor

Table of Contents

1. Parts and Labor (itype_189)
2. 6L45/6L50/6L80/6L90 (MYB, MYC, MYD) - Automatic Transmission (Article 13939)

Component Procedures: Transmission Speed Sensor

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Powertrain Control > Vehicle Speed Sensor, R&R	B	0.6	0.0
Remove & Replace	Transmission > Input Sensor, R&R	B	2.1	0.0

6L45/6L50/6L80/6L90 (MYB, MYC, MYD) - Automatic Transmission (Article 13939)

Non Standards

- Input and Output Speed Sensor Replacement (13940)