

Component Procedures: Air Door Actuator / Motor

Table of Contents

1. HVAC - Manual (Article 12795)
2. Parts and Labor (itype_189)
3. HVAC - Manual (Article 12789)

Component Procedures: Air Door Actuator / Motor

HVAC - Manual (Article 12795)

Non Standards

- Mode Control Cam Alignment (12796)

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Hvac Case > Door Actuator, R&R > Air Inlet	B	3.5	2.5
Remove & Replace	Hvac Case > Door Actuator, R&R > Mode	B	3.5	2.5
Remove & Replace	Hvac Case > Door Actuator, R&R > Temperature	B	3.5	2.5

HVAC - Manual (Article 12789)

Non Standards

- Temperature Valve Actuator Replacement (12797)
- Heater and Air Conditioning Control Cam Replacement (12791)
- Mode Control Cam Actuator Replacement (12794)
- Air Inlet Valve Actuator Replacement (12790)