

Component Procedures: Oil Temperature Sensor/Switch

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Oil Temperature Sensor/Switch

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Senders > Oil Temp Sending Unit, R&R	B	0.9	0.0