

Component Procedures: Refrigerant Pressure Sensor / Switch

Table of Contents

1. Air Conditioning Refrigerant Pressure Sensor Replacement (LFX) (Article 12723)

Component Procedures: Refrigerant Pressure Sensor / Switch

Air Conditioning Refrigerant Pressure Sensor Replacement (LFX) (Article 12723)

Callout Component Name

Preliminary Procedures Disconnect the electrical connector from the pressure sensor .

Preliminary Procedures

Disconnect the electrical connector from the pressure sensor .

1 A/C Refrigerant Pressure Sensor Caution: Refer to Fastener Caution . Tip: Remove and discard the O-ring.

Refer to Air Conditioning O-Ring Seal Replacement Tighten 6 Nm (53 lb in)

6 Nm (53 lb in)