

Component Procedures: Power Distribution Relay

Table of Contents

1. Electrical Relay Replacement (Attached to Wire Harness) (Article 12976)
2. Electrical Relay Replacement (Within An Electrical Center) (Article 12977)

Component Procedures: Power Distribution Relay

Electrical Relay Replacement (Attached to Wire Harness) (Article 12976)

Removal Procedure

- Locate the relay. Refer to the Master Electrical Component List to locate the relay in the vehicle. Click for full-size image
- Remove any fasteners which hold the relay in place.
- Remove any connector position assurance (CPA) devices or secondary locks.
- Separate the relay (1) from the wire harness connector (2).

Installation Procedure

- Connect the relay (1) to the wire harness connector (2). Click for full-size image
- Install any connector position assurance (CPA) devices or secondary locks.
- Install the relay using any fasteners or tape that originally held the relay in place.

Electrical Relay Replacement (Within An Electrical Center) (Article 12977)

Special Tools

EL-43244 - Relay Puller Pliers

For equivalent regional tools: Special Tools

Removal Procedure

- Remove the electrical center cover.
- Always note the orientation of the relay.
- If equipped with a notch style relay; observe the location of the notch on the old relay to verify the new relay is installed with the notch in the same location.
- Ensure that the electrical center is secure, as not to put added stress on the wires or terminals.
- Locate the relay. Refer to Electrical Center Identification Views to locate the electrical center where the relay exists.
- Using the EL-43244 (1) position the tool on opposing corners of the relay (2). Click for full-size image
- Remove the relay (2) from the electrical center.

Installation Procedure

- Install the relay (2) in the same position as removed. Click for full-size image
- Install the electrical center cover.