

# **Component Procedures: Turn Signal Lamp**

## **Table of Contents**

1. Tail Lamp Replacement - Inboard (Article 10422)
2. Tail Lamp Replacement - Outboard (Article 10426)

# Component Procedures: Turn Signal Lamp

## Tail Lamp Replacement - Inboard (Article 10422)

Callout Component Name

Preliminary Procedures Remove the tail lamp filler closeout panel. Refer to Tail Lamp Closeout Filler Replacement . Remove the tail lamp bezel. Refer to Tail Lamp Bezel Replacement . Disconnect the bulb socket from the tail lamp. Remove the three tail lamp nuts. Release the three locating tabs securing the tail lamp to the rear bumper fascia pocket. Push the tail lamp assembly outward from the rear bumper fascia.

Preliminary Procedures

- Remove the tail lamp filler closeout panel. Refer to Tail Lamp Closeout Filler Replacement .
- Remove the tail lamp bezel. Refer to Tail Lamp Bezel Replacement .
- Disconnect the bulb socket from the tail lamp.
- Remove the three tail lamp nuts.
- Release the three locating tabs securing the tail lamp to the rear bumper fascia pocket.
- Push the tail lamp assembly outward from the rear bumper fascia.

1 Tail Lamp Inboard Nut (Qty: 3) Caution: Refer to Fastener Caution . Tighten 2.5 Nm (22 lb in) 2.5 Nm (22 lb in)

2 Tail Lamp Bulb Socket Warning: Refer to Halogen Bulb Warning .

3 Tail Lamp Assembly Inboard

## Tail Lamp Replacement - Outboard (Article 10426)

Callout Component Name

Preliminary Procedures Remove the tail lamp filler closeout panel. Refer to Tail Lamp Closeout Filler Replacement . Remove the tail lamp bezel. Refer to Tail Lamp Bezel Replacement . Disconnect the bulb socket from the tail lamp. Remove the three tail lamp nuts. Release the three locating tabs securing the tail lamp to the rear bumper fascia pocket. Push the tail lamp assembly outward from the rear bumper fascia.

Preliminary Procedures

- Remove the tail lamp filler closeout panel. Refer to Tail Lamp Closeout Filler Replacement .
- Remove the tail lamp bezel. Refer to Tail Lamp Bezel Replacement .
- Disconnect the bulb socket from the tail lamp.
- Remove the three tail lamp nuts.
- Release the three locating tabs securing the tail lamp to the rear bumper fascia pocket.
- Push the tail lamp assembly outward from the rear bumper fascia.

1 Tail Lamp Outboard Nut (Qty: 3) Caution: Refer to Fastener Caution . Tighten Tighten the nuts to 2.5 Nm (22 lb in)

Tighten the nuts to 2.5 Nm (22 lb in)

2 Tail Lamp Bulb Socket Warning: Refer to Halogen Bulb Warning .

3 Tail Lamp Assembly Outboard