

# **Component Procedures: Hood Shock / Support**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Hood Strut Replacement (Article 10129)

# Component Procedures: Hood Shock / Support

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Lift Cylinder	92203599	Lift Cylinder	0.00	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Hood > Lift Cylinder, R&R > One	C	0.2	0.2
Remove & Replace	Hood > Lift Cylinder, R&R > Both	C	0.3	0.2

## Hood Strut Replacement (Article 10129)

### Callout Component Name

1 Hood Strut Assembly Warning: When a hood hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Caution: Apply pressure only at the end of the liftgate /hood assist rod that you are removing or attaching. Do NOT apply pressure to the middle of the rod because damage or bending will result. Tip: Remove the metal clip at the ends of the hood strut, then pull away from the stud.