

Component Procedures: Parking Brake Lever

Table of Contents

1. Parts and Labor (itype_189)
2. Parking Brake Lever Replacement (Article 10717)

Component Procedures: Parking Brake Lever

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Parking Brake > Parking Brake Control, R&R	B	2.0	0.0

Parking Brake Lever Replacement (Article 10717)

Removal Procedure

- Remove the exhaust muffler intermediate heat shield. Refer to Exhaust Muffler Intermediate Heat Shield Replacement .
- Pull the rear park brake cable s forward and disengage the front park brake cable from the equalizer (1).
Click for full-size image
- Remove the front park brake cable retainer nut (1). Click for full-size image
- Release the front park brake cable pass through grommet (2) from the driveline tunnel by pressing the grommet inward.
- Lower the vehicle.
- Remove the front floor console. Refer to Front Floor Console Replacement .
- Disconnect the park brake indicator switch electrical connector. Click for full-size image
- Remove the park brake lever nuts (1).
- Remove the park brake lever assembly. Route the front park brake cable and grommet through the hole in the driveline tunnel.

Installation Procedure

- Route the front park brake cable and grommet through the hole in the driveline tunnel. Click for full-size image
- Install the park brake lever assembly.
- Install the park brake lever nuts (1) and tighten to 22 Nm (16 lb ft) .
- Connect the park brake indicator switch electrical connector.
- Install the front floor console. Refer to Front Floor Console Replacement .
- Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .
- Install the front park brake cable retainer nut (1) and tighten to 7 Nm (61 lb in) . Click for full-size image
- Seat the front park brake cable pass through grommet (2) in the driveline tunnel.
- Pull the rear park brake cables forward and connect the front park brake cable to the equalizer (1). Click for full-size image
- Install the exhaust muffler intermediate heat shield. Refer to Exhaust Muffler Intermediate Heat Shield Replacement .
- Apply and release the park brake lever 3–4 times to ensure proper operation.