

Component Procedures: Clutch Slave Cylinder

Table of Contents

1. Parts and Labor (itype_189)
2. Clutch Concentric Actuator Cylinder Replacement (AISIN) (Article 14031)
3. Clutch Concentric Actuator Cylinder Replacement (Tremec) (Article 14032)

Component Procedures: Clutch Slave Cylinder

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Slave Cylinder	92159965	Slave Cylinder	394.99	Includes: Release Bearing.

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Hydraulic System > Slave Cylinder, R&R > See ?			0.0

Clutch Concentric Actuator Cylinder Replacement (AISIN) (Article 14031)

Removal Procedure

- Remove the transmission. Refer to Transmission Replacement Click for full-size image
- Remove the concentric actuator cylinder quick connect bolt (5).
- Remove the 3 concentric actuator cylinder bolts (1).
- Remove the concentric actuator cylinder (2).
- Remove the O-ring (3).

Installation Procedure

- Install the O-ring (3). Click for full-size image
- Install the concentric actuator cylinder (2).
- Install the 3 concentric actuator cylinder bolts (1) and the quick connect bolt (5).
- Tighten the 3 concentric actuator cylinder bolts to 20 Nm (15 lb ft) .
- Tighten the quick connect bolt to 10 Nm (89 lb in) .
- Install the transmission. Refer to Transmission Replacement

Clutch Concentric Actuator Cylinder Replacement (Tremec) (Article 14032)

Removal Procedure

- Remove the manual transmission from the vehicle. Refer to Transmission Replacement . Click for full-size image
- Disconnect the pipe fitting (1) from the clutch slave cylinder .
- Remove the clutch slave cylinder bolts (3).

Installation Procedure

- Install the clutch slave cylinder and bolts (3) and tighten to 13 Nm (115 lb in) . Click for full-size image
- Connect the pipe fitting (1) to the clutch slave cylinder. Tighten the pipe fitting (1) to 10 Nm (88 lb in)
- .
- Install the manual transmission to the vehicle. Refer to Transmission Replacement .