

Component Procedures: Traction Control Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Electronic Traction Control Switch Replacement (Article 10574)

Component Procedures: Traction Control Switch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Switch	92218817	Switch	31.82	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Traction Control > Switch, R&R	B	0.3	0.2

Electronic Traction Control Switch Replacement (Article 10574)

Callout Component Name

Preliminary Procedure Remove the front floor console front cover. Refer to Front Floor Console Front Cover Replacement .

Preliminary Procedure

Remove the front floor console front cover. Refer to Front Floor Console Front Cover Replacement .

1 Traction Control Switch Assembly Procedure Squeeze the tabs in order to release the switch from the trim plate. Disconnect electrical connector.

Procedure

- Squeeze the tabs in order to release the switch from the trim plate.
- Disconnect electrical connector.