

Component Procedures: Keyless Entry Receiver

Table of Contents

1. Parts and Labor (itype_189)
2. Remote Control Door Lock Receiver Programming and Setup (Article 10753)

Component Procedures: Keyless Entry Receiver

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Receiver > 315 MHz	13503205	Receiver	246.26	
Receiver > 433 MHz	13503204	Receiver	59.08	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Keyless Entry Components > Receiver, R&R	B	0.4	0.0

Remote Control Door Lock Receiver Programming and Setup (Article 10753)

Diagnostic Aids

The remote control door lock receiver only functions as an antenna , receiving the signals sent by the keyless entry transmitter and forwarding them to the body control module (BCM). The keyless entry software is contained wholly within the BCM.

Replace and Program ECU or Reprogram ECU

This ECU does not require SPS programming or any setup procedures.