

Component Procedures: Ambient Light Sensor

Table of Contents

1. Parts and Labor (itype_189)
2. Headlamp Automatic Control Ambient Light Sensor Replacement (Article 10397)

Component Procedures: Ambient Light Sensor

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Sentinel Sensor	13578461	Sunload Sensor	17.92	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Headlamps > Sentinel Sensor, R&R	B	0.3	0.0

Headlamp Automatic Control Ambient Light Sensor Replacement (Article 10397)

Callout Component Name

Preliminary Procedure Remove the instrument panel center air outlet grille. Refer to Instrument Panel Center Air Outlet Grille Replacement .

Preliminary Procedure

Remove the instrument panel center air outlet grille. Refer to Instrument Panel Center Air Outlet Grille Replacement .

1 Headlamp Auto Control Ambient Light Sensor Procedure Disconnect the electrical connector. Twist the sensor counterclockwise.

Procedure

- Disconnect the electrical connector.
- Twist the sensor counterclockwise.