

# **Component Procedures: Fog/Driving Lamp Bulb**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Front Fog Lamp Bulb Replacement (Base/SS) (Article 10388)
3. Front Fog Lamp Bulb Replacement (ZL1) (Article 10389)

# Component Procedures: Fog/Driving Lamp Bulb

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Fog Lamp Bulb	15839897	Fog Lamp Bulb	47.48	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Bulbs > Fog Lamp Bulb, R&R > One Side	C	0.6	0.4

## Front Fog Lamp Bulb Replacement (Base/SS) (Article 10388)

Callout Component Name

Preliminary Procedure Remove the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .

Preliminary Procedure

Remove the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .

1 Front Fog Lamp Electrical Connector Tip: Disconnect the fog lamp electrical connector from the fog lamp projector.

2 Front Fog Lamp Bulb Warning: Refer to Halogen Bulb Warning . Tip: Release the fog lamp bulb from the electrical harness connector.

## Front Fog Lamp Bulb Replacement (ZL1) (Article 10389)

Callout Component Name

Preliminary Procedure Remove the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .

Preliminary Procedure

Remove the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .

1 Front Fog Lamp Bulb Warning: Refer to Halogen Bulb Warning . Procedure Disconnect electrical connector.

Rotate the front fog lamp bulb counterclockwise to remove from the front fog lamp.

Procedure

- Disconnect electrical connector.

- Rotate the front fog lamp bulb counterclockwise to remove from the front fog lamp.