

Component Procedures: Combination Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Turn Signal Multifunction Switch Replacement (Article 13501)

Component Procedures: Combination Switch

Parts and Labor (itype_189)

Parts

| Qualifier | Part # | Name | Price | Note |
|--------------------|----------|--------------------|-------|------|
| Turn Signal Switch | 20962250 | Turn Signal Switch | 67.52 | |

Labor

| Operation | Qualifier Path | Skill | Std Hrs | Wty Hrs |
|------------------|------------------------------------|-------|---------|---------|
| Remove & Replace | Switches > Turn Signal Switch, R&R | B | 0.5 | 0.3 |

Turn Signal Multifunction Switch Replacement (Article 13501)

Callout Component Name

Preliminary Procedure Remove the steering column shroud. Refer to Steering Column Shroud Replacement .

Preliminary Procedure

Remove the steering column shroud. Refer to Steering Column Shroud Replacement .

1 Turn Signal Multifunction Switch Procedure Disconnect any electrical connectors as needed. Release the plastic retaining tabs and remove the turn signal multifunction switch from the turn signal switch bracket.

Procedure

- Disconnect any electrical connectors as needed.
- Release the plastic retaining tabs and remove the turn signal multifunction switch from the turn signal switch bracket.