

Component Procedures: Steering Column Cover

Table of Contents

1. Parts and Labor (itype_189)
2. Steering Column Shroud Replacement (Article 13497)

Component Procedures: Steering Column Cover

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Upper Shroud	92240629	3 - Upper Shroud	88.47	
Lower Shroud > Right	92235618	4 - Lower Shroud	22.18	
Lower Shroud > Left	92241112	4 - Lower Shroud	14.99	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Steering Column > Lower Shroud, R&R	C	0.4	0.3
Remove & Replace	Steering Column > Upper Shroud, R&R	C	0.4	0.3

Steering Column Shroud Replacement (Article 13497)

Removal Procedure

- Lower the tilt and telescope lever. Keep the lever in the released position. Telescope the steering column to the maximum rearward position. Tilt the steering column to the lowest position.
- Release the 1 tab (1) that secures the right side of the upper steering column shroud to the steering column. [Click for full-size image](#)
- Release the 1 tab (1) that secures the left side of the upper steering column shroud to the steering column. [Click for full-size image](#)
- Release the 2 tabs (2) that secure the right side of the upper steering column shroud to the steering column. [Click for full-size image](#)
- Release the 2 tabs that secure the left side of the upper steering column shroud to the steering column.
- Use a flat bladed plastic trim tool in order to release the retaining tabs (1) securing the instrument panel cluster trim plate to the instrument panel.
- Remove the upper steering column shroud and the instrument panel cluster trim plate as an assembly from the instrument panel.
- Use a flat bladed plastic trim tool in order to release the clip (2) and the 2 retainers. Remove the upper steering column shroud (3) from the instrument panel cluster trim plate (1). [Click for full-size image](#)
- Remove the 2 bolts (2) from the lower left steering column shroud (1). [Click for full-size image](#)
- Disengage the 4 tabs and remove the lower left steering column shroud from the steering column.
- Remove the 2 bolts (2) from the lower right steering column shroud (1). [Click for full-size image](#)
- Disengage the instrument panel harness retainer from the lower right steering column shroud.
- Remove the lower right steering column shroud from the vehicle.

Installation Procedure

- Secure the instrument panel harness retainer to the lower right steering column shroud (1). [Click for full-size image](#)
- Install the lower right steering column shroud to the steering column with the 2 bolts (2) and tighten to 2.5 Nm (22 lb in).
- Route the tilt and telescope lever through the opening in the lower left steering column shroud (1). Install the lower left steering column shroud to the steering column and engage the 4 tabs. [Click for full-size image](#)
- Install the 2 bolts (2) to the lower left steering column shroud.
- Install the instrument panel cluster trim plate (1) to the instrument panel assembly. [Click for full-size image](#)
- Install the upper steering column shroud (3) to the instrument panel cluster trim plate with the clip (2) and the 2 retainers.
- Install the left side of the upper steering column shroud to the steering column with the 2 tabs.
- Install the right side of the upper steering column shroud to the steering column with the 2 tabs.
- Install the left side of the upper steering column shroud to the steering column with the 1 tab (1). [Click for full-size image](#)
- Install the right side of the upper steering column shroud to the steering column with the 1 tab (1). [Click for full-size image](#)
- Raise the tilt and telescope lever to the secured position.