

# **Component Procedures: Headlamp Bulb**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Headlamp Bulb Replacement (RS) (Article 10399)

# Component Procedures: Headlamp Bulb

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Headlamp Bulb > Without HID	15203303	Headlamp Bulb	28.68	
Headlamp Bulb > With HID	13503387	Headlamp Bulb	189.95	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Bulbs > Headlamp Bulb, R&R > One Side	B	0.3	0.2

## Headlamp Bulb Replacement (RS) (Article 10399)

Callout Component Name

Preliminary Procedure Open and support the hood assembly in order to reach and remove the headlamp bulb accessory covers and bulb sockets.

Preliminary Procedure

Open and support the hood assembly in order to reach and remove the headlamp bulb accessory covers and bulb sockets.

1 Headlamp Bulb Accessory Cover Tip: Rotate the cover a quarter turn counter-clockwise and remove from the headlamp assembly .

2 Headlamp Bulb Assembly Warning: Refer to Halogen Bulb Warning . Procedure Disconnect the electrical connector from the bulb socket. Rotate the bulb socket counterclockwise and remove from the headlamp assembly.

Procedure

- Disconnect the electrical connector from the bulb socket.
- Rotate the bulb socket counterclockwise and remove from the headlamp assembly.