

Component Procedures: Air Flow Meter/Sensor

Table of Contents

1. Parts and Labor (itype_189)
2. Mass Airflow Sensor w/ Intake Air Temperature Sensor Replacement (Article 11455)

Component Procedures: Air Flow Meter/Sensor

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Mass Air Flow Sensor	20787043	Mass Air Flow Sensor	285.32	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Powertrain Control > Mass Air Flow Sensor, R&R	B	0.3	0.2

Mass Airflow Sensor w/ Intake Air Temperature Sensor Replacement (Article 11455)

Callout Component Name

1 Mass Airflow with Intake Air Temperature Sensor Fastener (Qty: 2) Caution: Refer to Fastener Caution .

Tighten 4 Nm (35 lb in)

4 Nm (35 lb in)

2 Mass Airflow with Intake Air Temperature Sensor Procedure Disconnect the electrical connector.

Procedure

Disconnect the electrical connector.