

# **Component Procedures: Evaporator Temperature Sensor / Switch**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Air Conditioning Evaporator Air Temperature Sensor Replacement (Article 12713)

# Component Procedures: Evaporator Temperature Sensor / Switch

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Switches & Sensors > Temp Sensor, R&R > Evapo?	B	1.5	0.0

## Air Conditioning Evaporator Air Temperature Sensor Replacement (Article 12713)

Callout Component Name

Preliminary Procedures Remove the right floor front air duct . Refer to Floor Front Air Outlet Duct Replacement . Reposition any wiring or hoses to gain access to evaporator temperature sensor .

Preliminary Procedures

- Remove the right floor front air duct . Refer to Floor Front Air Outlet Duct Replacement .

- Reposition any wiring or hoses to gain access to evaporator temperature sensor .

1 Evaporator Temperature Sensor Procedure Disconnect the wiring connector Rotate sensor ¼ turn counter clock wise to remove

Procedure

- Disconnect the wiring connector

- Rotate sensor ¼ turn counter clock wise to remove