

Component Procedures: Outside Temperature Display Sensor

Table of Contents

1. Ambient Air Temperature Sensor Replacement (Article 11043)

Component Procedures: Outside Temperature Display Sensor

Ambient Air Temperature Sensor Replacement (Article 11043)

Callout Component Name

Preliminary Procedure Remove Front Bumper Fascia Upper Support. Refer to Front Bumper Fascia Upper Support Replacement .

Preliminary Procedure

Remove Front Bumper Fascia Upper Support. Refer to Front Bumper Fascia Upper Support Replacement .

1 Ambient Air Temperature Sensor Procedure Disconnect the electrical connector. Unsnap the temperature sensor from the ai deflection/baffle.

Procedure

- Disconnect the electrical connector.
- Unsnap the temperature sensor from the ai deflection/baffle.