

Component Procedures: Brake Booster Vacuum Sensor

Table of Contents

1. Power Brake Booster Vacuum Sensor Replacement (Article 10697)

Component Procedures: Brake Booster Vacuum Sensor

Power Brake Booster Vacuum Sensor Replacement (Article 10697)

Removal Procedure

- Apply the brake pedal several times until the pedal becomes firm to deplete the vacuum reserve in the brake booster . [Click for full-size image](#)
- Disconnect the power brake booster vacuum sensor electrical connector.
- Remove the power brake booster vacuum sensor and check valve assembly (1) from the vacuum brake booster .
- Release the clamp and remove the power brake booster vacuum sensor and check valve assembly from the vacuum hose.

Installation Procedure

- Install the power brake booster vacuum sensor and check valve assembly to the vacuum hose. If necessary, a small amount of denatured alcohol may be used as a lubricant for assembly. Do not use soap. [Click for full-size image](#)
- Position the clamp to the vacuum hose.
- Install the vacuum sensor and check valve assembly (1) to the vacuum brake booster.
- Connect the power brake booster vacuum sensor electrical connector.