

Component Procedures: Dome Lamp Bulb

Table of Contents

1. Parts and Labor (itype_189)
2. Dome Lamp Bulb Replacement (Article 10386)

Component Procedures: Dome Lamp Bulb

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Bulbs > Interior Bulb, R&R	C	0.2	0.0

Dome Lamp Bulb Replacement (Article 10386)

Callout Component Name

Preliminary Procedure Remove the dome and reading lamp lens. Refer to Dome and Reading Lamp Lens Replacement

Preliminary Procedure

Remove the dome and reading lamp lens. Refer to Dome and Reading Lamp Lens Replacement

1 Dome Lamp Bulb