

Component Procedures: Fuel Tank Pressure Sensor

Table of Contents

1. Fuel Tank Pressure Sensor Replacement (Article 11442)

Component Procedures: Fuel Tank Pressure Sensor

Fuel Tank Pressure Sensor Replacement (Article 11442)

Callout Component Name

Preliminary Procedure Remove the fuel tank . Refer to Fuel Tank Replacement .

Preliminary Procedure

1 Fuel Tank Pressure Sensor Procedure Disconnect the electrical connector. Release the retaining tab.

Procedure

- Disconnect the electrical connector.
- Release the retaining tab.