

Component Procedures: Ignition Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Ignition and Start Switch Replacement (Article 12988)
3. Ignition and Start Switch Housing Replacement (Article 12987)

Component Procedures: Ignition Switch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Ignition Switch	20965947	Ignition Switch	33.38	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Ignition Lock > Ignition Switch, R&R	B	0.7	0.0

Ignition and Start Switch Replacement (Article 12988)

Callout Component Name

Preliminary Procedure Disconnect the battery negative cable. Refer to Battery Negative Cable Disconnection and Connection . Disable the supplemental inflatable restraint (SIR) system. Refer to SIR Disabling and Enabling . Remove the steering column shroud. Refer to Steering Column Shroud Replacement .

Preliminary Procedure

- Disconnect the battery negative cable. Refer to Battery Negative Cable Disconnection and Connection .
- Disable the supplemental inflatable restraint (SIR) system. Refer to SIR Disabling and Enabling .
- Remove the steering column shroud. Refer to Steering Column Shroud Replacement .

1 Ignition and Start Switch Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 2 Nm (18 lb in)

2 Nm (18 lb in)

2 Ignition and Start Switch Procedure Disconnect the ignition switch electrical connector.

Procedure

Disconnect the ignition switch electrical connector.

Ignition and Start Switch Housing Replacement (Article 12987)

Callout Component Name

Preliminary Procedure Remove the turn signal switch bracket. Refer to Turn Signal Switch Bracket Replacement .

Preliminary Procedure

Remove the turn signal switch bracket. Refer to Turn Signal Switch Bracket Replacement .

1 Ignition and Start Switch Housing Bolt Caution: Refer to Fastener Caution . Tighten 8 Nm (71 lb in)

8 Nm (71 lb in)

2 Ignition and Start Switch Housing Strap

3 Ignition and Start Switch Housing Procedure Disconnect any electrical connectors as necessary. Transfer any parts as necessary.

Procedure

- Disconnect any electrical connectors as necessary.

- Transfer any parts as necessary.