

# **Component Procedures: Oil Level Sensor For ECM**

## **Table of Contents**

1. Parts and Labor (itype\_189)

# Component Procedures: Oil Level Sensor For ECM

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Senders > Oil Level Sensor, R&R	B	0.6	0.4