

Component Procedures: Oil Pressure Sensor

Table of Contents

1. Engine Oil Pressure Sensor and/or Switch Replacement (Article 12180)

Component Procedures: Oil Pressure Sensor

Engine Oil Pressure Sensor and/or Switch Replacement (Article 12180)

Removal Procedure

- Remove the air cleaner assembly . Refer to Air Cleaner Assembly Replacement .
- Disconnect the oil pressure sensor electrical connector. [Click for full-size image](#)
- Remove the oil pressure sensor (1).

Installation Procedure

- Install the oil pressure sensor (1) and tighten to 20 Nm (15 lb ft) . [Click for full-size image](#)
- Connect the oil pressure sensor electrical connector.
- Install the air cleaner assembly. Refer to Air Cleaner Assembly Replacement .