

Component Procedures: Expansion Block/Orifice Tube

Table of Contents

1. Air Conditioning Evaporator Thermal Expansion Valve Replacement (Article 12716)

Component Procedures: Expansion Block/Orifice Tube

Air Conditioning Evaporator Thermal Expansion Valve Replacement (Article 12716)

Callout Component Name

Preliminary Procedures Recover the refrigerant . Refer to Refrigerant Recovery and Recharging . Remove the air conditioning evaporator thermal expansion valve tube. Refer to Air Conditioning Evaporator Thermal Expansion Valve Tube Replacement .

Preliminary Procedures

- Recover the refrigerant . Refer to Refrigerant Recovery and Recharging .

- Remove the air conditioning evaporator thermal expansion valve tube. Refer to Air Conditioning Evaporator Thermal Expansion Valve Tube Replacement .

1 Thermal Expansion Valve Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 6 Nm (53 lb in)

6 Nm (53 lb in)

2 Thermal Expansion Valve Tip: Remove and discard the sealing washers. Refer to Air Conditioning Compressor Hose Seal Replacement .