

# Component Procedures: Trim Panel

## Table of Contents

1. Body Hinge Pillar Trim Panel Replacement (Article 10073)
2. Rear Compartment Side Trim Panel Replacement (Convertible) (Article 10090)
3. Rear Compartment Side Trim Panel Replacement (Coupe) (Article 10091)
4. Quarter Upper Trim Panel Replacement (Convertible) (Article 10085)
5. Quarter Upper Trim Panel Replacement (Coupe) (Article 10086)
6. Quarter Upper Rear Trim Panel Replacement (Coupe) (Article 10084)
7. Quarter Trim Panel Replacement (Convertible) (Article 10082)
8. Quarter Trim Panel Replacement (Coupe) (Article 10083)
9. Quarter Trim Panel Insert Replacement (Convertible) (Article 10081)
10. Body Rear Corner Trim Panel Replacement (Convertible) (Article 10074)
11. Rear End Trim Finish Panel Replacement (Convertible) (Article 10092)
12. Rear End Trim Finish Panel Replacement (Coupe) (Article 10093)
13. Rear End Trim Finish Upper Panel Replacement (Convertible) (Article 10094)
14. Luggage Shade Replacement (Convertible) (Article 10079)
15. Rear Compartment Front Trim Replacement (Convertible) (Article 10087)

## **Component Procedures: Trim Panel**

### **Body Hinge Pillar Trim Panel Replacement (Article 10073)**

Callout Component Name

Preliminary Procedure Remove the front side door opening floor carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement . Remove instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement .

Preliminary Procedure

- Remove the front side door opening floor carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement .

- Remove instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement .

1 Body Hinge Pillar Trim Panel Assembly

### **Rear Compartment Side Trim Panel Replacement (Convertible) (Article 10090)**

Callout Component Name

Preliminary Procedures Remove the rear compartment floor panel carpet . Refer to Rear Compartment Floor Panel Carpet Replacement . Remove the rear end trim finish panel . Refer to Rear End Trim Finish Panel Replacement .

Preliminary Procedures

- Remove the rear compartment floor panel carpet . Refer to Rear Compartment Floor Panel Carpet Replacement .

- Remove the rear end trim finish panel . Refer to Rear End Trim Finish Panel Replacement .

1 Rear Compartment Side Trim Retainer (Qty: 3)

2 Rear Compartment Side Trim Panel Assembly Procedure Disconnect the electrical connector.

Procedure

Disconnect the electrical connector.

### **Rear Compartment Side Trim Panel Replacement (Coupe) (Article 10091)**

Callout Component Name

Preliminary Procedures Remove the rear seat back . Refer to Rear Seat Back Cushion Removal and Installation .

Remove the quarter trim panel . Refer to Quarter Trim Panel Replacement . Remove the rear end trim finish panel . Refer to Rear End Trim Finish Panel Replacement .

Preliminary Procedures

- Remove the rear seat back . Refer to Rear Seat Back Cushion Removal and Installation .

- Remove the quarter trim panel . Refer to Quarter Trim Panel Replacement .

- Remove the rear end trim finish panel . Refer to Rear End Trim Finish Panel Replacement .

1 Rear Compartment Side Trim Retainer (Qty: 4)

2 Rear Compartment Side Trim

### **Quarter Upper Trim Panel Replacement (Convertible) (Article 10085)**

Callout Component Name

Preliminary Procedures Place the folding top assembly in a full down position to allow access to the quarter upper trim panel . Remove the lower rear seat shoulder belt anchor plate fastener. Refer to Rear Seat Retractor Side Belt Replacement

Preliminary Procedures

- Place the folding top assembly in a full down position to allow access to the quarter upper trim panel .

- Remove the lower rear seat shoulder belt anchor plate fastener. Refer to Rear Seat Retractor Side Belt Replacement

1 Quarter Upper Trim Panel Assembly Procedure Use a flat-bladed tool to aid in removal. Feed the seat belt through the opening in the quarter upper trim panel.

Procedure

- Use a flat-bladed tool to aid in removal.

- Feed the seat belt through the opening in the quarter upper trim panel.

### **Quarter Upper Trim Panel Replacement (Coupe) (Article 10086)**

Callout Component Name

Preliminary Procedures Disable the SIR system. Refer to SIR Disabling and Enabling . Remove the quarter trim panel . Refer to Quarter Trim Panel Replacement . Remove the quarter upper rear trim panel. Refer to Quarter Upper Rear Trim Panel Replacement . Remove the rear seat retractor side belt. Refer to Rear Seat Retractor Side Belt Replacement . Remove the driver or passenger seat retractor side belt. Refer to Driver or Passenger Seat Retractor Side Belt Replacement .

#### Preliminary Procedures

- Disable the SIR system. Refer to SIR Disabling and Enabling .
- Remove the quarter trim panel . Refer to Quarter Trim Panel Replacement .
- Remove the quarter upper rear trim panel. Refer to Quarter Upper Rear Trim Panel Replacement .
- Remove the rear seat retractor side belt. Refer to Rear Seat Retractor Side Belt Replacement .
- Remove the driver or passenger seat retractor side belt. Refer to Driver or Passenger Seat Retractor Side Belt Replacement .

1 Quarter Upper Trim Panel Bolt Cover Procedure Use a flat-bladed tool to release the cover.

#### Procedure

Use a flat-bladed tool to release the cover.

2 Quarter Upper Trim Panel Fastener Caution: Refer to Fastener Caution . Tighten 2 Nm (18 lb in)

2 Nm (18 lb in)

3 Quarter Upper Trim Panel Assembly Procedure Disconnect the seat belt through the slot in the escutcheon opening.

Disconnect the seat belt through the slot in the escutcheon opening.

### **Quarter Upper Rear Trim Panel Replacement (Coupe) (Article 10084)**

#### Callout Component Name

Preliminary Procedure Disable the SIR system. Refer to SIR Disabling and Enabling .

#### Preliminary Procedure

Disable the SIR system. Refer to SIR Disabling and Enabling .

1 Quarter Upper Rear Trim Panel Assembly Procedure The tether clip at the upper portion of the garnish molding MUST be replaced every time the quarter upper rear trim panel is removed. Release the tether to remove.

Securely attach the tether when reinstalling the molding.

#### Procedure

- The tether clip at the upper portion of the garnish molding MUST be replaced every time the quarter upper rear trim panel is removed.
- Release the tether to remove.
- Securely attach the tether when reinstalling the molding.

### **Quarter Trim Panel Replacement (Convertible) (Article 10082)**

#### Callout Component Name

Preliminary Procedures Place the folding top assembly in a full down position to allow access to the quarter trim panel . Reposition the quarter upper trim panel to gain access to the quarter trim panel. Refer to Quarter Upper Trim Panel Replacement . Remove the front side door carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement . Remove rear seat cushion . Refer to Rear Seat Cushion Removal and Installation . Remove the driver or passenger seat retractor side belt anchor fastener. Refer to Driver or Passenger Seat Retractor Side Belt Replacement .

#### Preliminary Procedures

- Place the folding top assembly in a full down position to allow access to the quarter trim panel .
- Reposition the quarter upper trim panel to gain access to the quarter trim panel. Refer to Quarter Upper Trim Panel Replacement .
- Remove the front side door carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement .
- Remove rear seat cushion . Refer to Rear Seat Cushion Removal and Installation .
- Remove the driver or passenger seat retractor side belt anchor fastener. Refer to Driver or Passenger Seat Retractor Side Belt Replacement .

1 Quarter Trim Panel Assembly Procedure Grasp the panel and pull outward, disengaging the clips securing the panel to the vehicle. Feed the seat belt through the opening in the panel.

#### Procedure

- Grasp the panel and pull outward, disengaging the clips securing the panel to the vehicle.
- Feed the seat belt through the opening in the panel.

### **Quarter Trim Panel Replacement (Coupe) (Article 10083)**

#### Callout Component Name

Preliminary Procedures Remove the front side door carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement . Remove the rear seat cushion . Refer to Rear Seat Cushion Removal and Installation . Remove rear seat back . Refer to Rear Seat Back Cushion Removal and Installation .

#### Preliminary Procedures

- Remove the front side door carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement .
  - Remove the rear seat cushion . Refer to Rear Seat Cushion Removal and Installation .
  - Remove rear seat back . Refer to Rear Seat Back Cushion Removal and Installation .
- 1 Rear Quarter Lower Trim Panel Procedure Use trim tool or equivalent to aid in the removal of trim panel.  
Procedure  
Use trim tool or equivalent to aid in the removal of trim panel.

### **Quarter Trim Panel Insert Replacement (Convertible) (Article 10081)**

Callout Component Name

1 Quarter Trim Panel Insert Assembly Procedure Use a trim tool or equivalent to aid in removal. Start at forward edge and pull outward to disengage the clips that secure the quarter trim panel insert to the quarter trim panel.

Procedure

- Use a trim tool or equivalent to aid in removal.
- Start at forward edge and pull outward to disengage the clips that secure the quarter trim panel insert to the quarter trim panel.

### **Body Rear Corner Trim Panel Replacement (Convertible) (Article 10074)**

Callout Component Name

Preliminary Procedure Remove the quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement .

Preliminary Procedure

Remove the quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement .

1 Body Rear Corner Trim Panel Retainer (Qty: 5)

2 Body Rear Corner Trim Panel Assembly

### **Rear End Trim Finish Panel Replacement (Convertible) (Article 10092)**

Callout Component Name

Preliminary Procedure Partially remove the rear compartment opening weatherstrip . Refer to Rear Compartment Lid Weatherstrip Replacement .

Preliminary Procedure

Partially remove the rear compartment opening weatherstrip . Refer to Rear Compartment Lid Weatherstrip Replacement .

1 Convenience Net Fastener (Qty: 6) Caution: Refer to Fastener Caution .

2 Rear End Trim Finish Panel Assembly

### **Rear End Trim Finish Panel Replacement (Coupe) (Article 10093)**

Callout Component Name

Preliminary Procedure Partially remove the rear compartment opening weatherstrip . Refer to Rear Compartment Lid Weatherstrip Replacement .

Preliminary Procedure

Partially remove the rear compartment opening weatherstrip . Refer to Rear Compartment Lid Weatherstrip Replacement .

1 Convenience Net Fastener (Qty: 6) Caution: Refer to Fastener Caution .

2 Rear End Trim Finish Panel Assembly

### **Rear End Trim Finish Upper Panel Replacement (Convertible) (Article 10094)**

Callout Component Name

Preliminary Procedure Remove the quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement .

Preliminary Procedure

Remove the quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement .

1 Rear End Trim Finish Upper Panel Assembly Procedure Use a trim tool or equivalent to aid in the removal of the trim panel.

Procedure

Use a trim tool or equivalent to aid in the removal of the trim panel.

### **Luggage Shade Replacement (Convertible) (Article 10079)**

Callout Component Name

1 Luggage Shade Fastener (Qty: 2) Caution: Refer to Fastener Caution . Tighten 10 Nm (89 lb in)

10 Nm (89 lb in)

2 Luggage Shade Assembly

## **Rear Compartment Front Trim Replacement (Convertible) (Article 10087)**

Callout Component Name

Preliminary Procedures Remove the luggage shade. Refer to Luggage Shade Replacement . Remove the rear end trim finish upper panel. Refer to Rear End Trim Finish Upper Panel Replacement .

Preliminary Procedures

- Remove the luggage shade. Refer to Luggage Shade Replacement .

- Remove the rear end trim finish upper panel. Refer to Rear End Trim Finish Upper Panel Replacement .

1 Front Top Stowage Compartment Boot Rear Retaining Post Bolt and Nut (Qty: 2) Caution: Refer to Fastener

Caution Procedure From inside the rear compartment, lift up on the folding top stowage compartment boot quarter outer drain panel to expose retainers. Note: The front top stowage compartment boot rear retaining post bolt takes the place of the upper corner plastic push-in pin. Tighten 9 Nm (80 lb in)

Procedure

From inside the rear compartment, lift up on the folding top stowage compartment boot quarter outer drain panel to expose retainers.

9 Nm (80 lb in)

2 Rear Compartment Front Trim Retainer (Qty: 4)

3 Rear Compartment Front Trim Assembly