

Component Procedures: Convertible Top Latch Position Switch / Sensor

Table of Contents

1. Roof Retractable Position Sensor Replacement (Article 13149)
2. Roof Retractable Luggage Shade Detection Sensor Replacement (Article 13147)
3. Roof Retractable Opening Position Switch Replacement (Article 13148)

Component Procedures: Convertible Top Latch Position Switch / Sensor

Roof Retractable Position Sensor Replacement (Article 13149)

Callout Component Name

Preliminary Procedure Remove the right side folding top cylinder without disconnecting the hydraulic lines. Refer to Folding Top Cylinder Replacement . Reposition the folding top pump with motor without disconnecting the hydraulic hoses. Refer to Folding Top Pump with Motor Replacement .

Preliminary Procedure

- Remove the right side folding top cylinder without disconnecting the hydraulic lines. Refer to Folding Top Cylinder Replacement .
- Reposition the folding top pump with motor without disconnecting the hydraulic hoses. Refer to Folding Top Pump with Motor Replacement .

1 Roof Retractable Position Sensor Procedure Reposition hydraulic hose to access sensor. Disconnect sensor connector from pump with motor assembly. Unclip sensor from cylinder. Sensor wire is secured with tie straps to the hose assembly. Note: Use suitable tool to insert between hydraulic cylinder and switch to release from hydraulic cylinder.

Procedure

- Reposition hydraulic hose to access sensor.
- Disconnect sensor connector from pump with motor assembly.
- Unclip sensor from cylinder. Sensor wire is secured with tie straps to the hose assembly.

Roof Retractable Luggage Shade Detection Sensor Replacement (Article 13147)

Callout Component Name

Preliminary Procedure Remove the left rear compartment side trim panel . Refer to Rear Compartment Side Trim Panel Replacement .

Preliminary Procedure

Remove the left rear compartment side trim panel . Refer to Rear Compartment Side Trim Panel Replacement .

1 Roof Retractable Luggage Shade Detection Sensor Procedure Disconnect electrical connection. Slide sensor from retaining clip and unclip connector to remove.

Procedure

- Disconnect electrical connection.
- Slide sensor from retaining clip and unclip connector to remove.

Roof Retractable Opening Position Switch Replacement (Article 13148)

Callout Component Name

Preliminary Procedure Remove the lower roof front header garnish molding. Refer to Roof Front Header Garnish Molding Replacement - Lower .

Preliminary Procedure

Remove the lower roof front header garnish molding. Refer to Roof Front Header Garnish Molding Replacement - Lower .

1 Roof Retractable Opening Position Switch Procedure Disconnect electrical connector. Depress tabs to remove.

Procedure

- Disconnect electrical connector.
- Depress tabs to remove.