

Component Procedures: Supercharger

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Supercharger

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Supercharger > Sensor, R&R > Inlet Sensor	B	0.5	0.0
Remove & Replace	Supercharger > Sensor, R&R > Outlet Sensor	B	0.5	0.0
Remove & Replace	Supercharger > Supercharger, R&R	B	7.5	0.0