

Component Procedures: Air Filter Element

Table of Contents

1. Parts and Labor (itype_189)
2. Air Cleaner Element Replacement (Article 11397)

Component Procedures: Air Filter Element

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Air Filter	92196275	Air Filter	48.21	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Filters > Air Filter, R&R	C	0.2	0.0

Air Cleaner Element Replacement (Article 11397)

Callout Component Name

1 Air Cleaner Element Caution: Do not use any tools or pry on the air cleaner cover retainers as damage to the air cleaner will result and can cause poor air cleaner element sealing. Procedure Disconnect the mass airflow electrical connector. Push back the retaining tabs.

Procedure

- Disconnect the mass airflow electrical connector.
- Push back the retaining tabs.