

# **Component Procedures: Air Cleaner Housing**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Air Cleaner Assembly Replacement (Article 11396)

# Component Procedures: Air Cleaner Housing

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Filters > Air Filter, R&R	C	0.2	0.0

### Air Cleaner Assembly Replacement (Article 11396)

Callout Component Name

Preliminary Procedure Remove the mass airflow sensor . Refer to Mass Airflow Sensor with Intake Air Temperature Sensor Replacement . Disconnect the outlet duct from the air cleaner assembly . Refer to Air Cleaner Outlet Duct Replacement .

Preliminary Procedure

- Remove the mass airflow sensor . Refer to Mass Airflow Sensor with Intake Air Temperature Sensor Replacement

- Disconnect the outlet duct from the air cleaner assembly . Refer to Air Cleaner Outlet Duct Replacement .

1 Air Cleaner Assembly Fastener (Qty: 2) Caution: Refer to Fastener Caution . Tighten 10 Nm (89 lb in)

10 Nm (89 lb in)

2 Air Cleaner Assembly