

Component Procedures: Fuel Filler Neck

Table of Contents

1. Parts and Labor (itype_189)
2. Fuel Tank Filler Pipe Housing Replacement (Article 10119)

Component Procedures: Fuel Filler Neck

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Fuel Supply > Filler Neck, R&R	B	0.6	0.0

Fuel Tank Filler Pipe Housing Replacement (Article 10119)

Callout Component Name

Preliminary Procedure Remove the filler pipe . Refer to Fuel Tank Filler Pipe Replacement for the 2.8L, 3.0L, 3.2L, or 3.6L engine or Fuel Tank Filler Pipe Replacement for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engine.

Preliminary Procedure

Remove the filler pipe . Refer to Fuel Tank Filler Pipe Replacement for the 2.8L, 3.0L, 3.2L, or 3.6L engine or Fuel Tank Filler Pipe Replacement for the 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L engine.

1 Fuel Tank Filler Pipe Housing Retainer (Qty: 4) Procedure Using a flat-bladed tool that fits into the 4 depression, break through the 4 depressions with light pressure and then pry the clips free to release the fuel tank filler pipe housing from the panel. Tip: The fuel tank filler pipe housing once removed cannot be reused and must be replaced with a NEW fuel tank filler pipe housing.

Procedure

Using a flat-bladed tool that fits into the 4 depression, break through the 4 depressions with light pressure and then pry the clips free to release the fuel tank filler pipe housing from the panel.

2 Fuel Tank Filler Pipe Housing Tip: Disconnect the electrical connector.