

Component Procedures: Rear Shelf

Table of Contents

1. Rear Window Panel Trim Replacement (Coupe) (Article 10095)

Component Procedures: Rear Shelf

Rear Window Panel Trim Replacement (Coupe) (Article 10095)

Callout Component Name

Preliminary Procedures Disable SIR system. Refer to SIR Disabling and Enabling . Remove quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement . Remove the rear seat cushion . Refer to Rear Seat Cushion Removal and Installation . Pull the release strap located in the center of the rear seat back cushion, folding the rear seat forward.

Preliminary Procedures

- Disable SIR system. Refer to SIR Disabling and Enabling .
- Remove quarter upper trim panel . Refer to Quarter Upper Trim Panel Replacement .
- Remove the rear seat cushion . Refer to Rear Seat Cushion Removal and Installation .
- Pull the release strap located in the center of the rear seat back cushion, folding the rear seat forward.

1 Rear Window Panel Trim Fastener (Qty: 4)

2 Rear Window Panel Trim Assembly Procedure When replacing the rear window panel trim assembly, transfer all necessary components.

Procedure

When replacing the rear window panel trim assembly, transfer all necessary components.