

Component Procedures: Parking Assist Control Module

Table of Contents

1. Parts and Labor (itype_189)
2. Parking Assist Control Module Replacement (Article 13226)

Component Procedures: Parking Assist Control Module

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Control Module	20925650	Control Module	175.51	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Parking Aid > Alarm Module, R&R	B	1.6	0.0

Parking Assist Control Module Replacement (Article 13226)

Callout Component Name

Preliminary Procedure Remove the rear end trim panel. Refer to Rear End Trim Finish Panel Replacement .

Preliminary Procedure

Remove the rear end trim panel. Refer to Rear End Trim Finish Panel Replacement .

1 Rear Object Alarm Module Nut (Qty: 3) Caution: Refer to Fastener Caution . Tighten 6 Nm (53 lb in)

6 Nm (53 lb in)

2 Rear Object Alarm Module Procedure Disconnect electrical connector. Reprogram the rear object alarm module after replacement. Refer to Control Module References .

Procedure

- Disconnect electrical connector.

- Reprogram the rear object alarm module after replacement. Refer to Control Module References .