

Component Procedures: Parking Brake Actuator

Table of Contents

1. Parking Brake Actuator Replacement (Article 10714)

Component Procedures: Parking Brake Actuator

Parking Brake Actuator Replacement (Article 10714)

Removal Procedure

- Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
- Remove the parking brake shoes. Refer to [Parking Brake Shoe Replacement](#) .
- Disconnect the parking brake cable from the actuator. [Click for full-size image](#)
- Remove the parking brake actuator (1).

Installation Procedure

- Install the parking brake actuator (1). [Click for full-size image](#)
- Connect the parking brake cable from the actuator.
- Install the parking brake shoes. Refer to [Parking Brake Shoe Replacement](#) .
- Adjust the parking brake. Refer to [Parking Brake Adjustment](#) .