

Component Procedures: Air Bag Deactivation Indicator

Table of Contents

1. Instrument Panel Airbag Arming Status Display Replacement (Article 13319)

Component Procedures: Air Bag Deactivation Indicator

Instrument Panel Airbag Arming Status Display Replacement (Article 13319)

Callout Component Name

1 Roof Console Assembly Procedure Remove the roof console. Refer to Roof Console Replacement .

Procedure

Remove the roof console. Refer to Roof Console Replacement .

2 Inflatable Restraint Instrument Panel Module Indicator Assembly Procedure Unsnap the indicator from the roof console bezel.

Unsnap the indicator from the roof console bezel.