

Component Procedures: Canister Purge Solenoid

Table of Contents

1. Parts and Labor (itype_189)
2. Evaporative Emission Canister Purge Solenoid Valve Replacement (Article 11416)

Component Procedures: Canister Purge Solenoid

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Vapor Canister > Purge Solenoid, R&R	B	0.3	0.2
Remove & Replace	Vapor Canister > Vent Control Solenoid, R&R >?	B	0.9	0.0
Remove & Replace	Vapor Canister > Vent Control Solenoid, R&R >?	B	3.5	2.5

Evaporative Emission Canister Purge Solenoid Valve Replacement (Article 11416)

Callout Component Name

1 EVAP Emission Canister Purge Solenoid Valve Hose

2 Intake Manifold

3 Evaporative Emission Canister Purge Solenoid Valve Procedure Detach the emission canister purge solenoid valve from the intake manifold. Install a NEW O-ring.

Procedure

- Detach the emission canister purge solenoid valve from the intake manifold.

- Install a NEW O-ring.

4 EVAP Emission Canister Purge Solenoid Valve to Intake Manifold Retaining Bolt Caution: Refer to Fastener

Caution Tighten 10 Nm (89 lb in)

10 Nm (89 lb in)

5 EVAP Emission Canister Purge Solenoid Valve Electric Harness Connector