

# **Component Procedures: Blower Motor Resistor**

## **Table of Contents**

1. Parts and Labor (itype\_189)

# Component Procedures: Blower Motor Resistor

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Blower Motor > Resistor, R&R	B	0.3	0.0